### **RCP-46 Base Kit**

Important:	1. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
	2. Check the contents of kit before commencing fitment and report any discrepancies.
	3. Place these instructions in the vehicle's glove box after installation is complete.
	5. These instructions must be followed for warranty to be upheld.
Tall Le	g shown.

Maximum carrying capacity: 75kg (165lbs) evenly distributed over crossbars when mounted on the strongest section of the roof. Please refer to your vehicle manufacturers handbook for maximum roof loading. Always use the lower of the two figures.

Low Leg shown.

#### Advisorv:

It is essential that all bolt connections be checked after 48hrs from when you first install your crossbars. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

Use only non-stretch fastening ropes or straps.

### **Load Ratings**

When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicle's User Manual) should be divided by a safety factor of **2**. For example, if the vehicle's maximum roof load rating is 75kgs\165lbs, these racks, when fitted to this vehicle should have no more than 37.5kgs\82lbs loaded on them.

#### Caution:

The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking. Please remove crossbars when putting vehicle through an automatic car wash.

Note for Dealers and Fitters: It is your responsibility to ensure instructions are given to the end user or client.

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: R1047 Prepared By: Kayle Everett Authorised By: Chris Murty Fit Time: 30min Issue No: 02 Issue Date: 11/12/2017

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.



## **RCP-46 Base Kit**


### **Parts List**


Item	Components	Qty	Part No.
1	Short Fixed Mount Rotation Block	4	M835
2	Short Fixed Mount Base Cover	8	M836
3	Short Fixed Mount Base	4	M834
4	Tall Fixed Mount Flat Rubber	4	M838
5	M6 x 35mm Hex Setscrew	4	B203
6	M6 Spring Washer	4	W004
7	M6 x 16mm Flat Washer	4	W031
8	M6 Fix Point Adaptor	4	CA1029
9	Instructions	1	R1047

Tools Required: 1. 10mm Socket Wrench.


Note: Legs and Crossbars are sold separate. Be sure to


obtain correct kits for your vehicle.

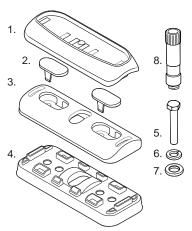

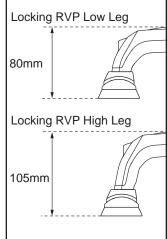


# Instructions

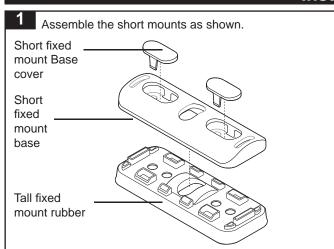


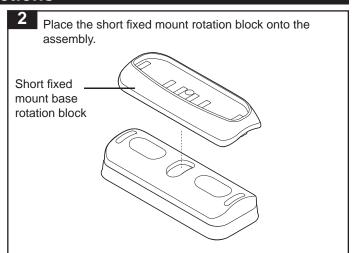


3 Carefully remove the ditch fill. Refer to vehicle owners manual. If the mounting points in the roof can be easily exposed, complete this and move to step 6 instead.

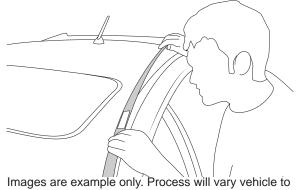

vehicle.

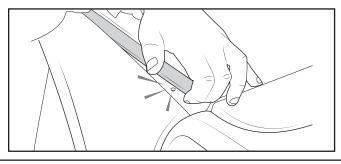

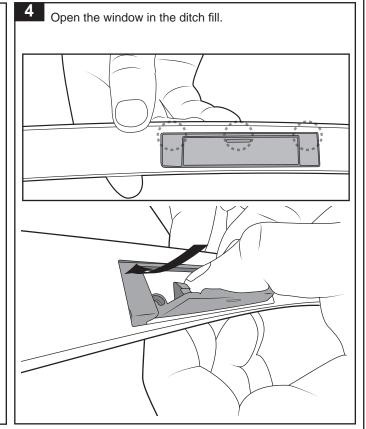



# **RCP-46 Base Kit**

