

Kit 1020



BMW 5-Series, 4-dr Sedan, 96-00, 01-03 / *97-03

BMW 5-Series Touring, 5-dr Estate, 96-00, 01-03


BMW 5-Series, 5-dr Wagon, *97-03

*North America

 
 
480R
754

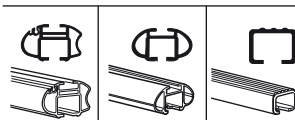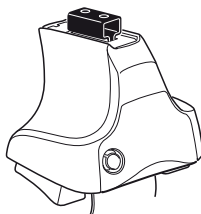

480




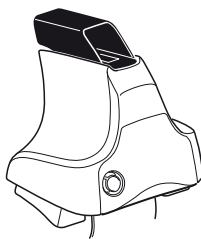 







750

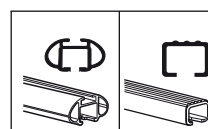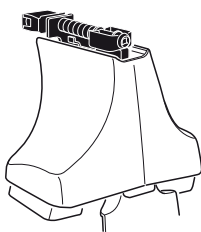  

THULE[®]
SWEDEN

         ISO 11154-E

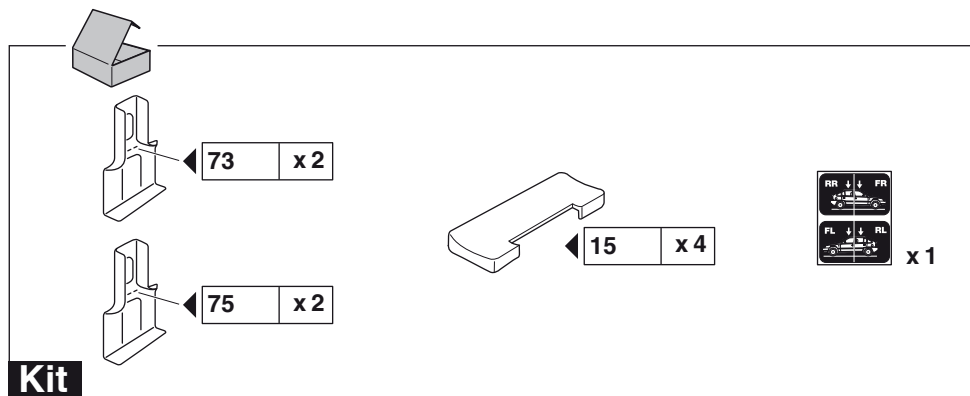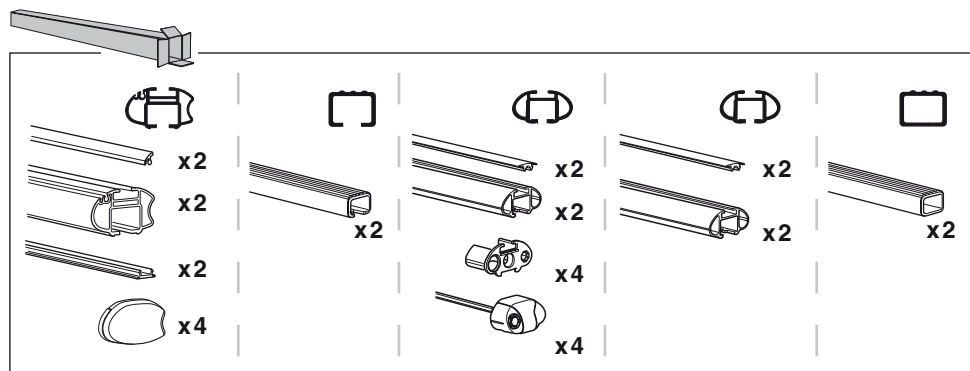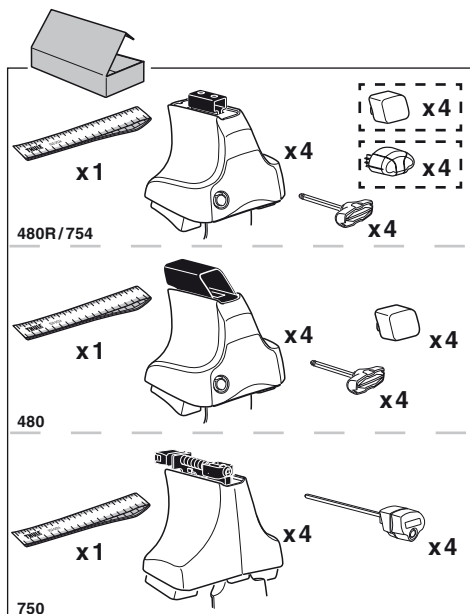
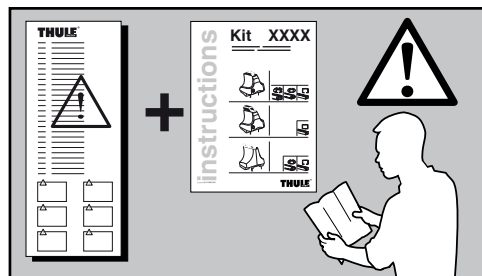


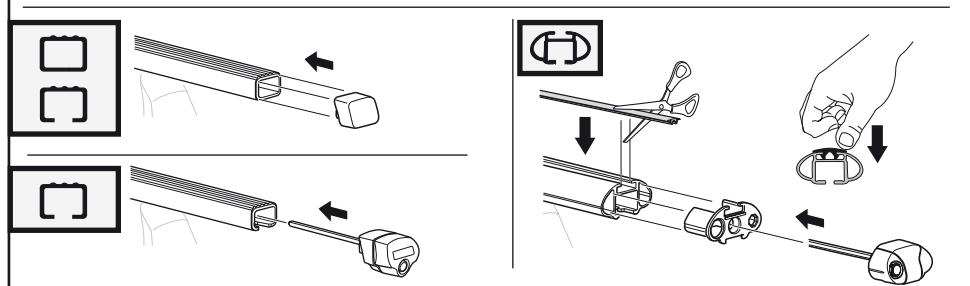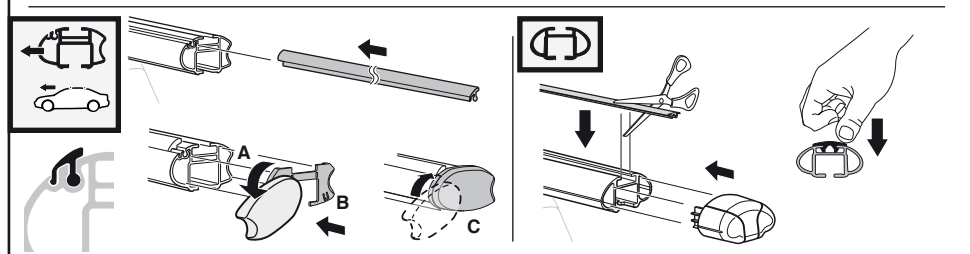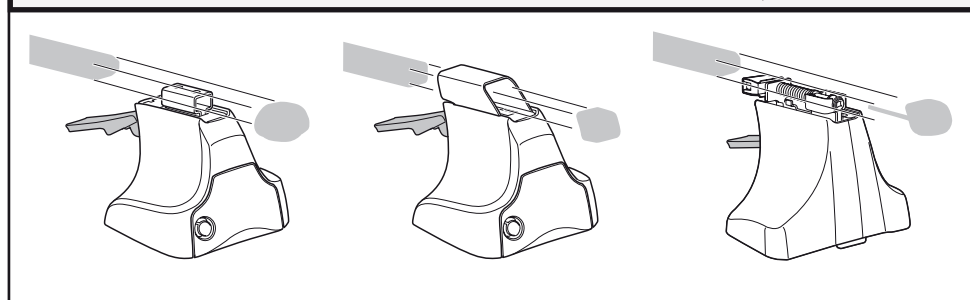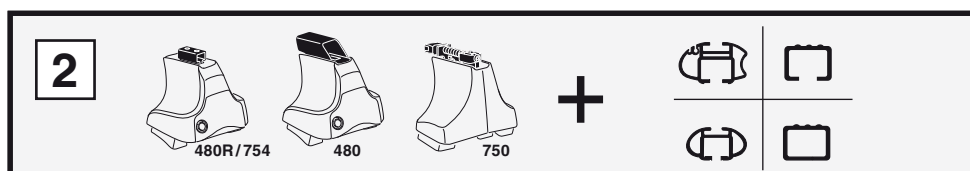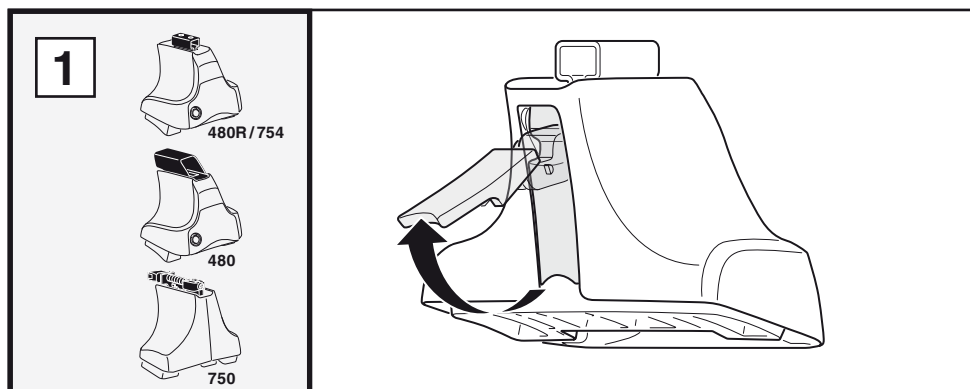

3



  
754




750



 1

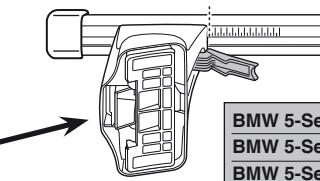


2

 


	X
BMW 5-Series, 4-dr Sedan, 96-00, 01-03 / *97-03	36,5
BMW 5-Series Touring, 5-dr Estate, 96-00, 01-03	34
BMW 5-Series, 5-dr Wagon, *97-03	34

 1

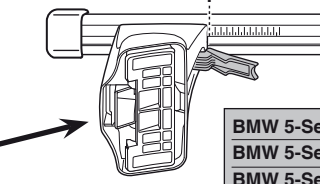

2

 

	Y
BMW 5-Series, 4-dr Sedan, 96-00, 01-03 / *97-03	33
BMW 5-Series Touring, 5-dr Estate, 96-00, 01-03	30,5
BMW 5-Series, 5-dr Wagon, *97-03	30,5

 


480R




480

1




2

 


	X inch	X mm
BMW 5-Series, 4-dr Sedan, 96-00, 01-03 / *97-03	40"	1016 mm
BMW 5-Series Touring, 5-dr Estate, 96-00, 01-03	39"	991 mm
BMW 5-Series, 5-dr Wagon, *97-03	39"	991 mm

 1



2

 













	Y inch	Y mm
BMW 5-Series, 4-dr Sedan, 96-00, 01-03 / *97-03	39 5/8"	981 mm
BMW 5-Series Touring, 5-dr Estate, 96-00, 01-03	37 5/8"	956 mm
BMW 5-Series, 5-dr Wagon, *97-03	37 5/8"	956 mm

4


BMW 5-Series, 4-dr Sedan, 96-00, 01-03 / *97-03

BMW 5-Series Touring, 5-dr Estate, 96-00, 01-03

          
 
 
BMW 5-Series, 5-dr Wagon, *97-03

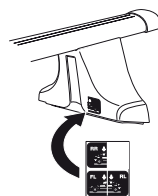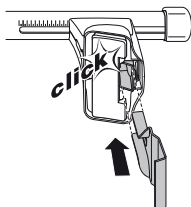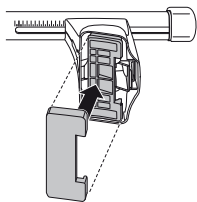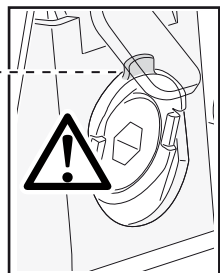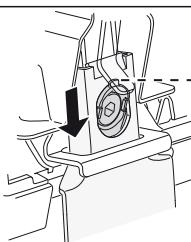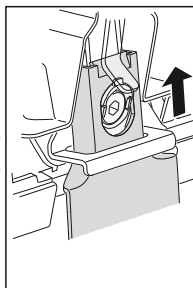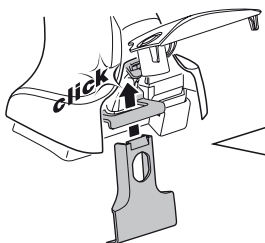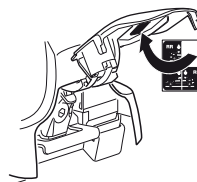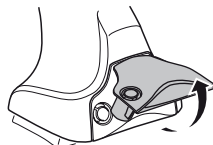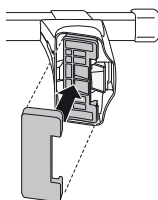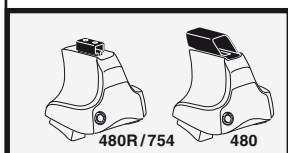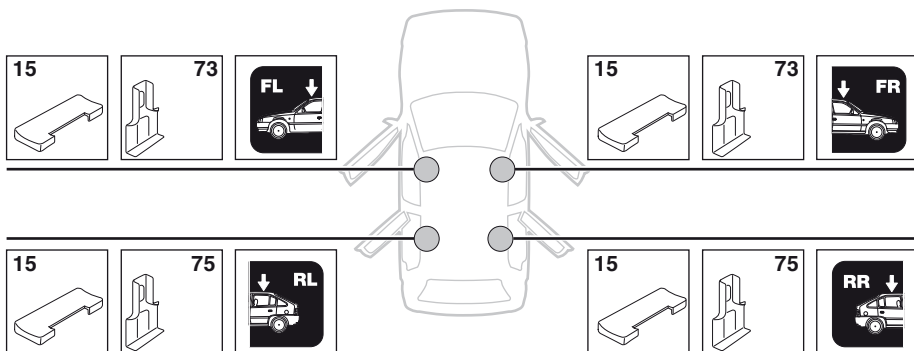

5

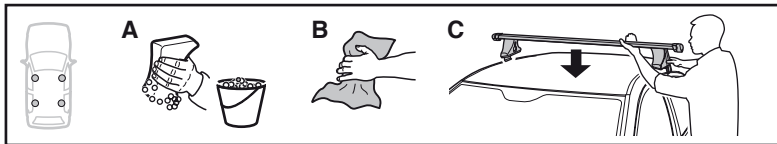 

	X mm	Y mm	X inch	Y inch
BMW 5-Series, 4-dr Sedan, 96-00, 01-03 / *97-03	190 mm	690 mm	7 1/2"	27 1/8"
BMW 5-Series Touring, 5-dr Estate, 96-00, 01-03	480 mm	700 mm	18 7/8"	27 1/2"
BMW 5-Series, 5-dr Wagon, *97-03	480 mm	700 mm	18 7/8"	27 1/2"

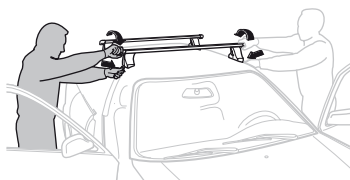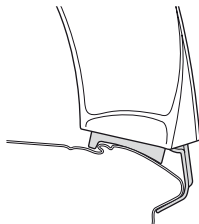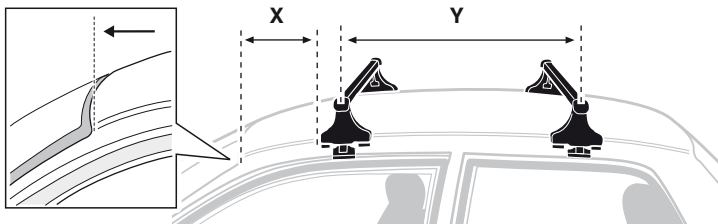   

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciot pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

 
 
 
 
 
6





480R/754



480

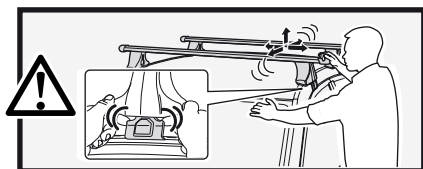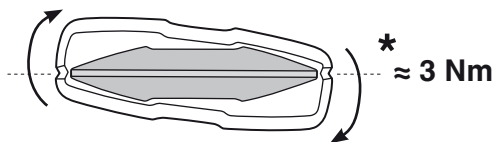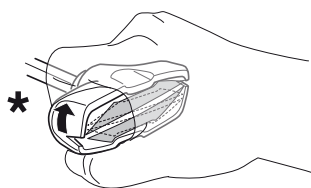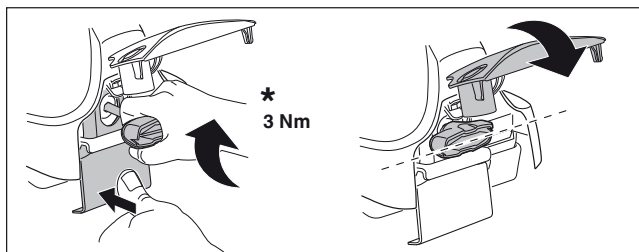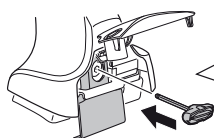


750

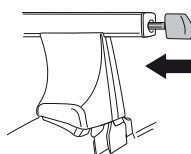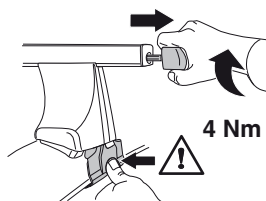  


i



 
1

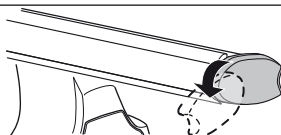


2

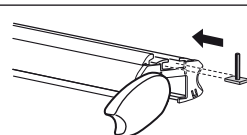 


i

 

1

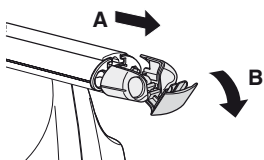 


2

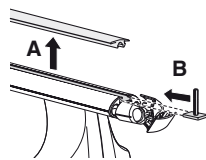 


i








 1

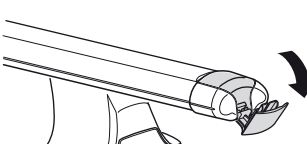

2

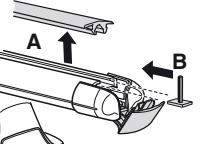 

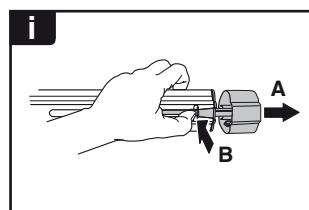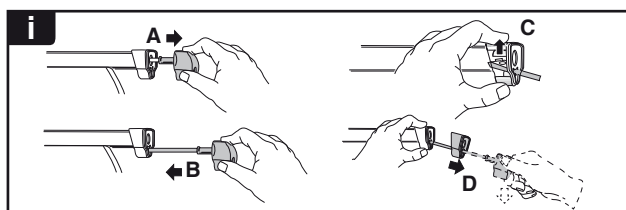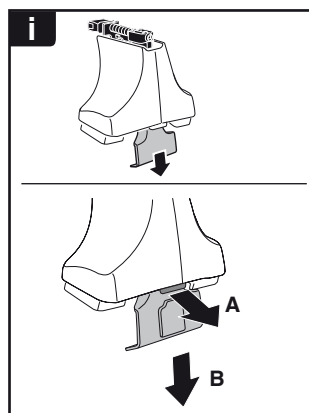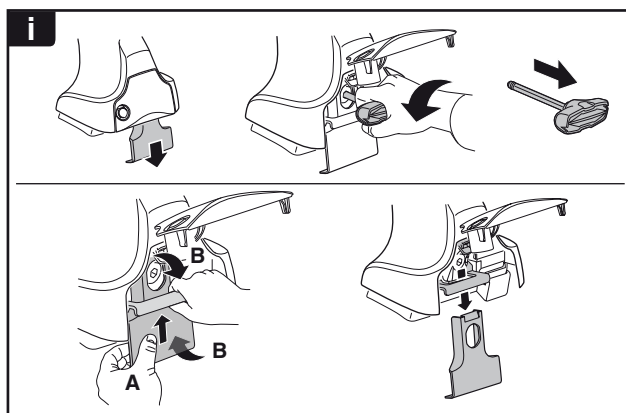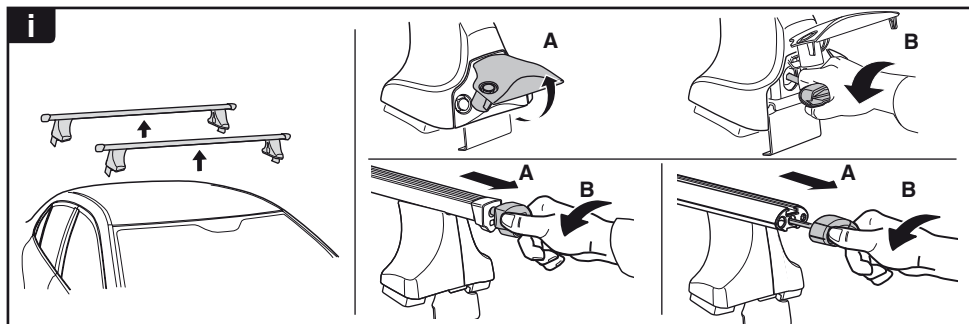     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		