 
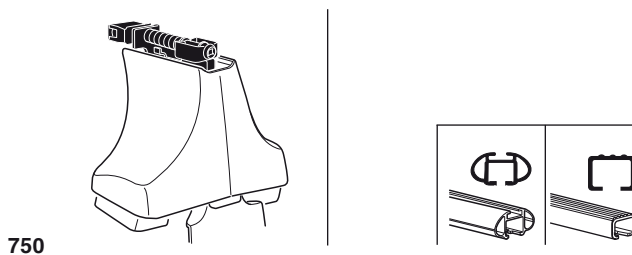 
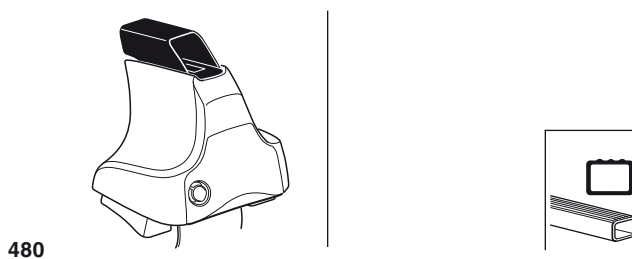 


Kit 1116

- mitsubishi L 200**, 2-dr Single Cab, 98-05
- mitsubishi L 200**, 2-dr Extended Cab, 98-05
- mitsubishi L 200**, 4-dr Double Cab, 98-99
- mitsubishi Triton**, 2-dr Single Cab, 98-05
- mitsubishi Triton**, 2-dr Extended Cab, 98-05
- mitsubishi Triton**, 4-dr Double Cab, 98-99

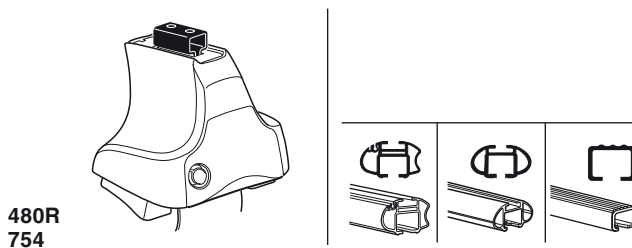

2-dr Single Cab

 xx kg
xx lbs

+

 3,5 kg / xx lbs

=

Max.
30kg/66 lbs

2-dr Extended Cab
4-dr Double Cab

 xx kg
xx lbs

+

 7 kg / 15,4 lbs

=

Max.
75kg/165 lbs







80 km/h
50 Mph

130 km/h
80 Mph

40 km/h
25 Mph

km/h
Mph

THULE



+

Instructions

Kit XXXX



 













 x1

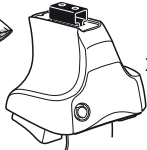  x4

 
 x4

 x4

 x4

480R/754

 x1

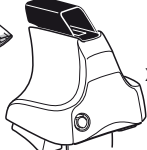
 x4

 x4

 x4


480


 
 x1

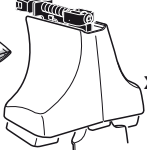 x4

 x4

   750




				
 x2	 x2	 x2	 x2	 x2
 x2		 x2	 x2	
 x2		 x4		
 x2		 x4		
 x2				
 x4				





 230 x 4








03 x 4




x 1

    
 
Kit

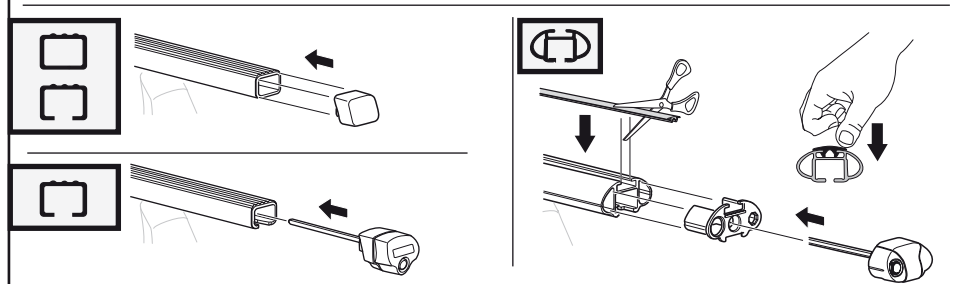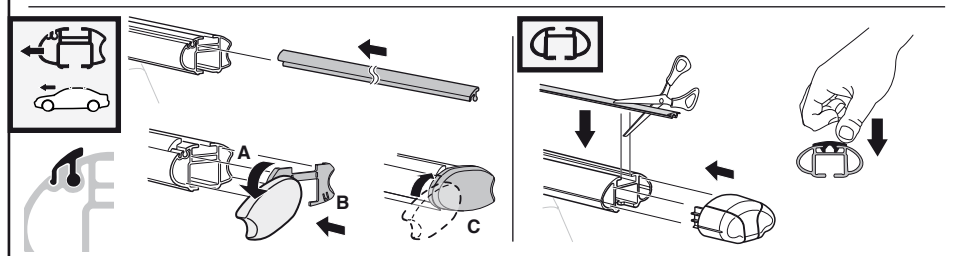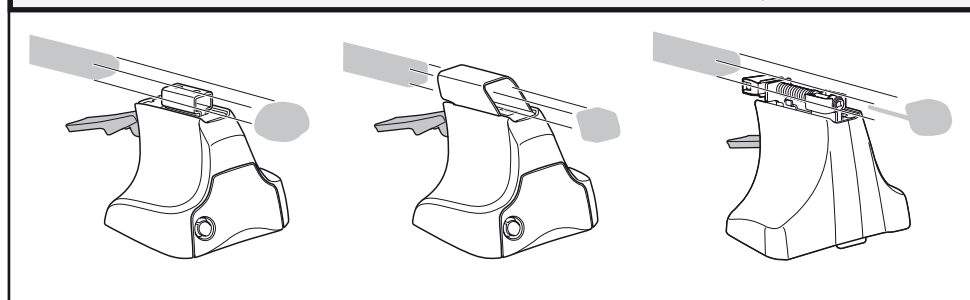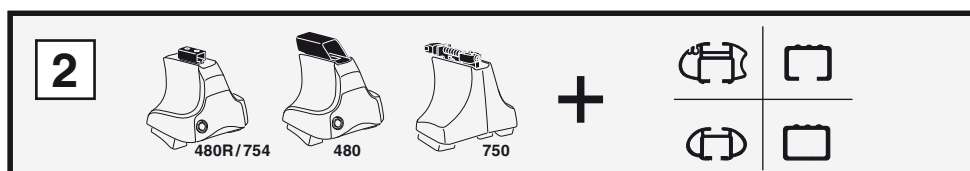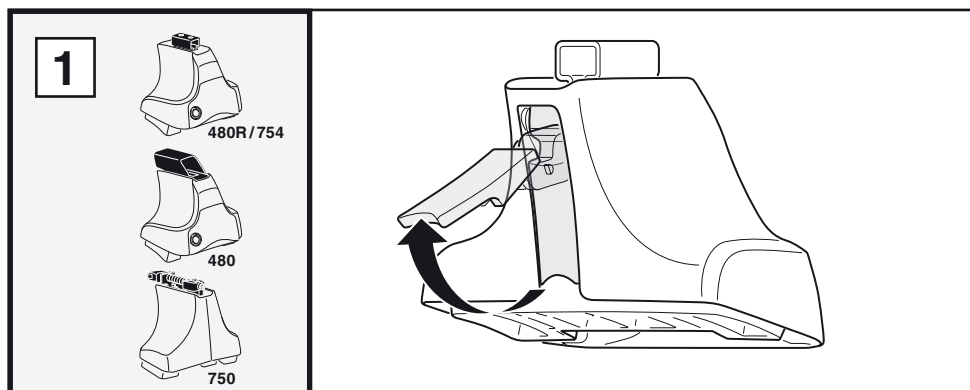

3


 


754

  

750

  1

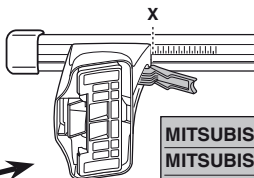



2



	X
mitsubishi L 200, 2-dr Single Cab, 98-05	36,5
mitsubishi L 200, 2-dr Extended Cab, 98-05	36,5
mitsubishi L 200, 4-dr Double Cab, 98-99	36,5
mitsubishi Triton, 2-dr Single Cab, 98-05	36,5
mitsubishi Triton, 2-dr Extended Cab, 98-05	36,5
mitsubishi Triton, 4-dr Double Cab, 98-99	36,5

  
1

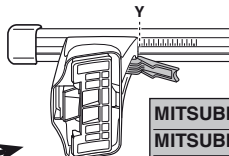


2



	Y
mitsubishi L 200, 2-dr Single Cab, 98-05	-
mitsubishi L 200, 2-dr Extended Cab, 98-05	37
mitsubishi L 200, 4-dr Double Cab, 98-99	36,5
mitsubishi Triton, 2-dr Single Cab, 98-05	-
mitsubishi Triton, 2-dr Extended Cab, 98-05	37
mitsubishi Triton, 4-dr Double Cab, 98-99	36,5

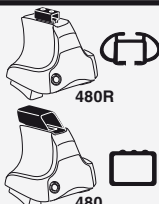 


480R

 


480

 1




2

 


	X inch	X mm
mitsubishi L 200, 2-dr Single Cab, 98-05	40"	1016 mm
mitsubishi L 200, 2-dr Extended Cab, 98-05	40"	1016 mm
mitsubishi L 200, 4-dr Double Cab, 98-99	40"	1016 mm
mitsubishi Triton, 2-dr Single Cab, 98-05	40"	1016 mm
mitsubishi Triton, 2-dr Extended Cab, 98-05	40"	1016 mm
mitsubishi Triton, 4-dr Double Cab, 98-99	40"	1016 mm

 1



2













 


	Y inch	Y mm
mitsubishi L 200, 2-dr Single Cab, 98-05	-	-
mitsubishi L 200, 2-dr Extended Cab, 98-05	40 1/4"	1021 mm
mitsubishi L 200, 4-dr Double Cab, 98-99	40"	1016 mm
mitsubishi Triton, 2-dr Single Cab, 98-05	-	-
mitsubishi Triton, 2-dr Extended Cab, 98-05	40 1/4"	1021 mm
mitsubishi Triton, 4-dr Double Cab, 98-99	40"	1016 mm

4

MITSUBISHI L 200, 2-dr Single Cab, 98-05

             MITSUBISHI Triton, 2-dr Single Cab, 98-05

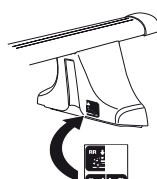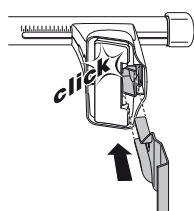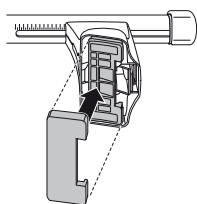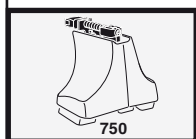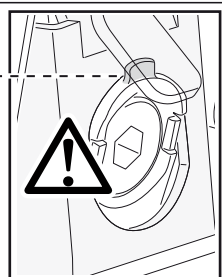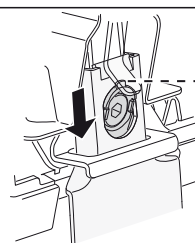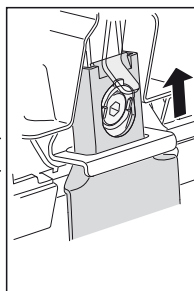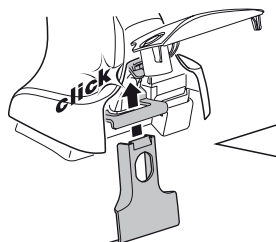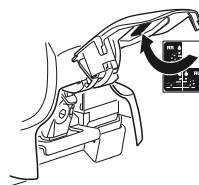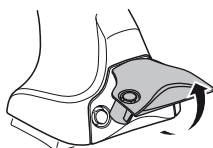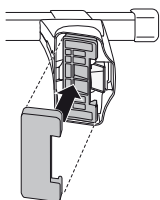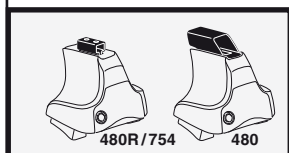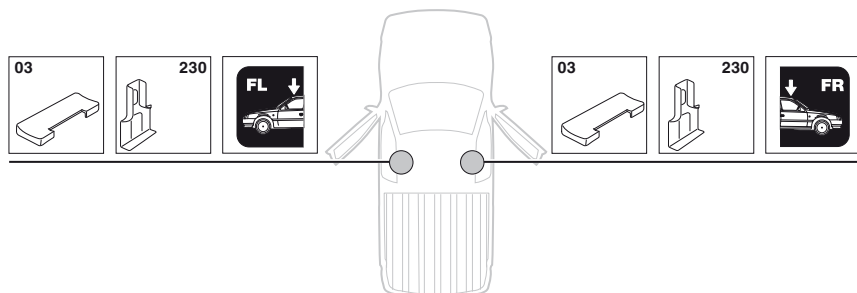














4

MITSUBISHI L 200, 2-dr Extended Cab, 98-05


MITSUBISHI L 200, 4-dr Double Cab, 98-99

MITSUBISHI Triton, 2-dr Extended Cab, 98-05

             MITSUBISHI Triton, 4-dr Double Cab, 98-99

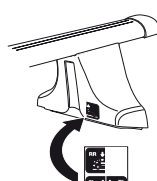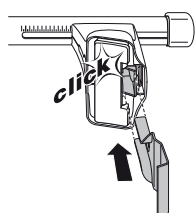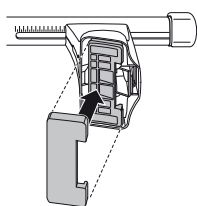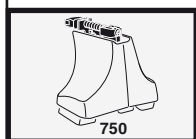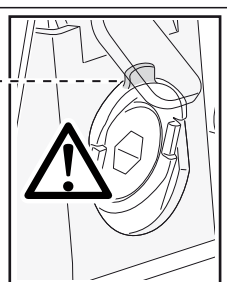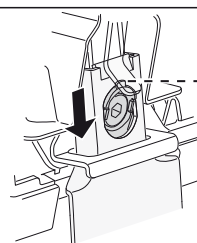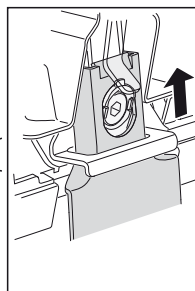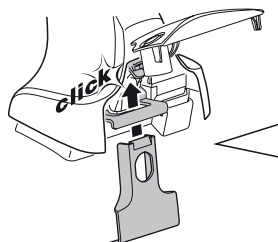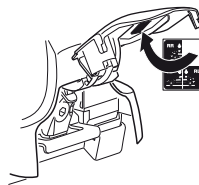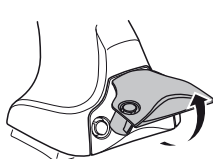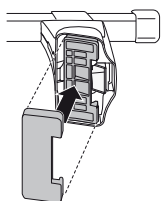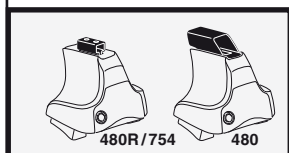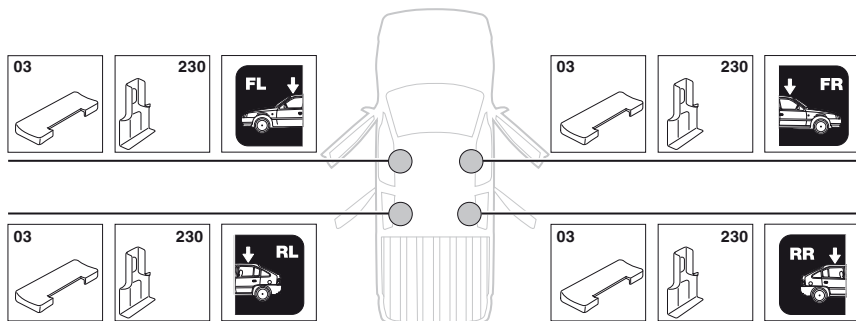


5

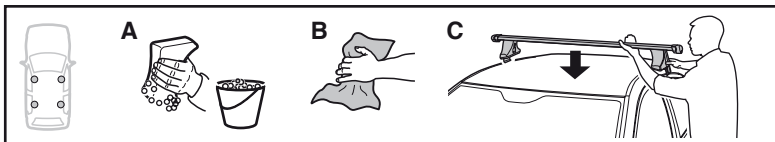 

	X mm	Y mm	X inch	Y inch
MITSUBISHI L 200, 2-dr Single Cab, 98-05	280 mm	-	11"	-
MITSUBISHI L 200, 2-dr Extended Cab, 98-05	200 mm	700 mm	7 7/8"	27 1/2"
MITSUBISHI Triton, 2-dr Single Cab, 98-05	280 mm	-	11"	-
MITSUBISHI Triton, 2-dr Extended Cab, 98-05	200 mm	700 mm	7 7/8"	27 1/2"



MITSUBISHI L 200, 2-dr Single Cab, 98-05

 MITSUBISHI Triton, 2-dr Single Cab, 98-05

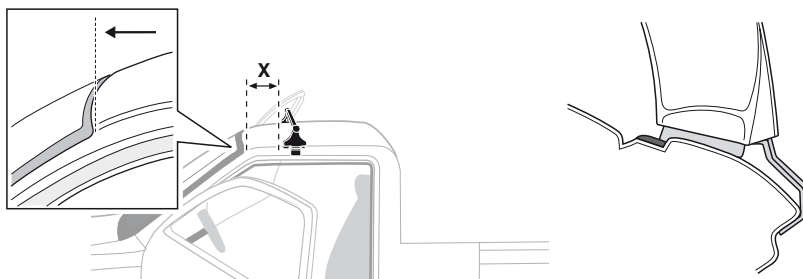

MITSUBISHI L 200, 2-dr Extended Cab, 98-05

  
MITSUBISHI Triton, 2-dr Extended Cab, 98-05

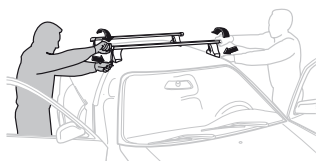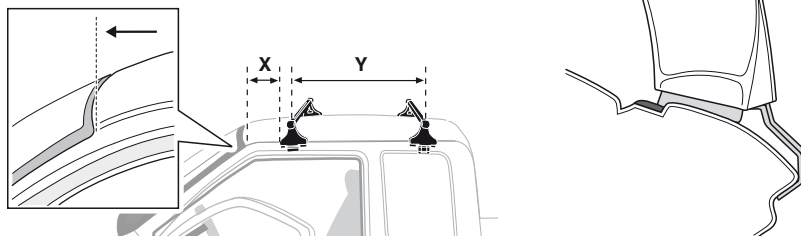

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Serrare alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokrétla багаžníka dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขันในแบบสลับ


 
5

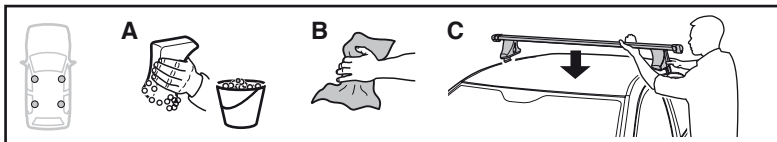

	X mm	Y mm	X inch	Y inch
mitsubishi L 200, 4-dr Double Cab, 98-99	280 mm	700 mm	11 "	27 1/2 "
mitsubishi Triton, 4-dr Double Cab, 98-99	280 mm	700 mm	11 "	27 1/2 "

mitsubishi L 200, 4-dr Double Cab, 98-99

  mitsubishi Triton, 4-dr Double Cab, 98-99

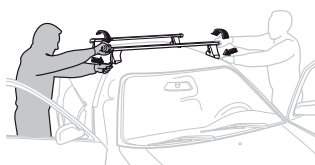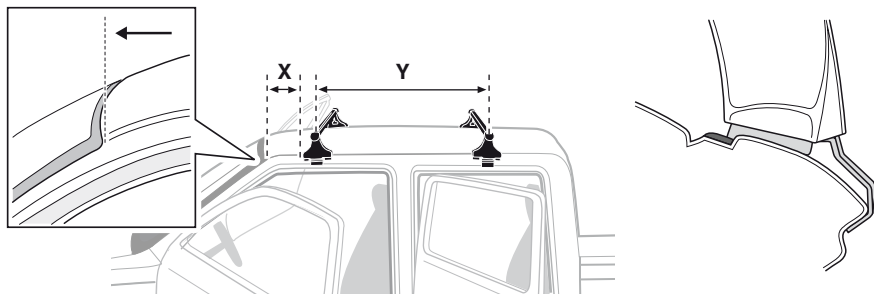


GB/US	Tighten alternately
D	Die Schrauben abwechselnd anziehen
F	Serrer alternativement chaque côté
NL	Afwisselend aan de linker- en de rechterkant aandraaien
I	Alternare il serraggio delle viti
E	Serrare alternativamente
PT	Aperte alternadamente
S	Dra åt växelsvis
FIN	Kierrä vuorotellen
EST	Pinguldage vaheldumisi
LAT	Pievelciēt pamišus
LIT	Užsukinėkite pakaitomis
PL	Śruby dokręcaj naprzemiennie
RU	Затягивайте попеременно

CZ	Pokrétla багажника dokręcaj dokręcaj naprzemiennie.
SK	Dofahujte striedavo
SLO	Privijajte izmenično.
HR	Naizmjenično zategnite
HU	Egymástól függetlenül szorítandó
GR	Σφιγγετε εναλλάξ
TR	Dönüşümlü sıkın

中文	交替拧紧
한국어	번갈아 가며 조이십시오.
日本語	交互に締め付けてください。
ไทย	ขันในแบบสลับ


 
6





480R/754








  480

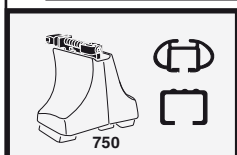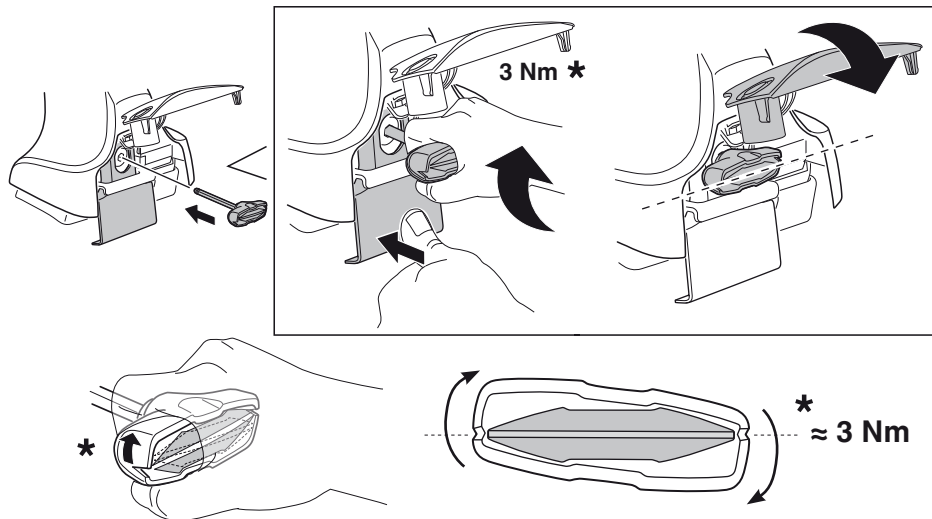

750

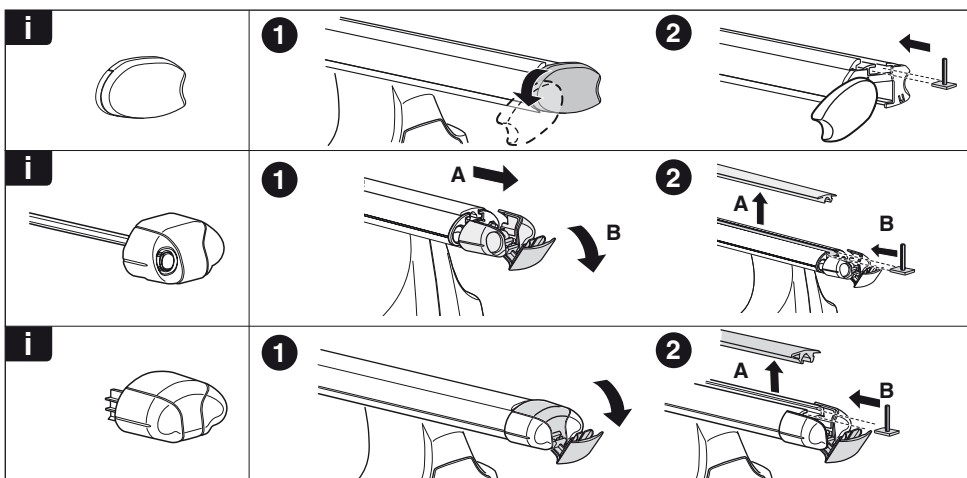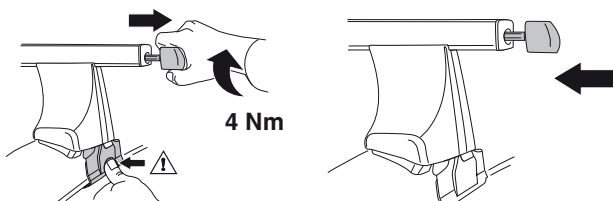  

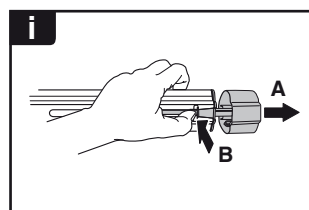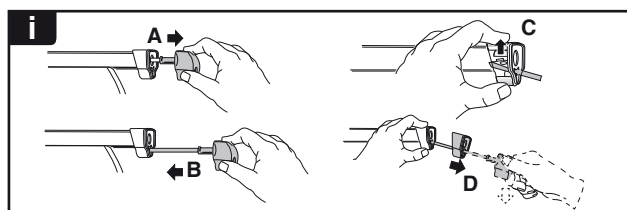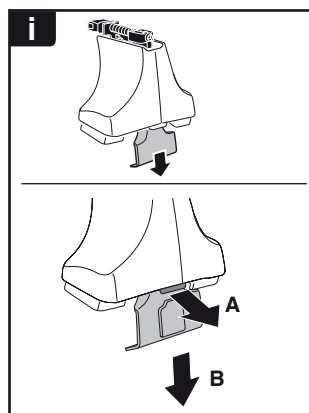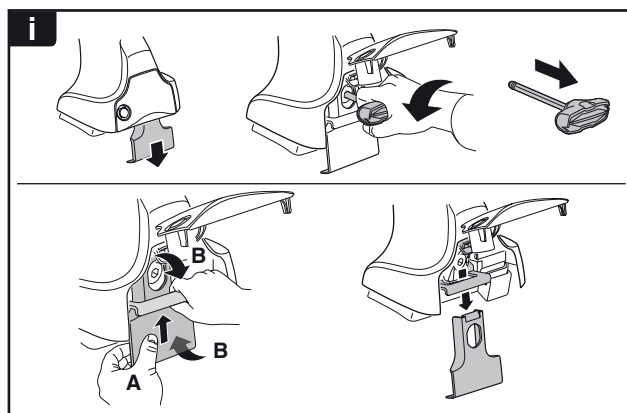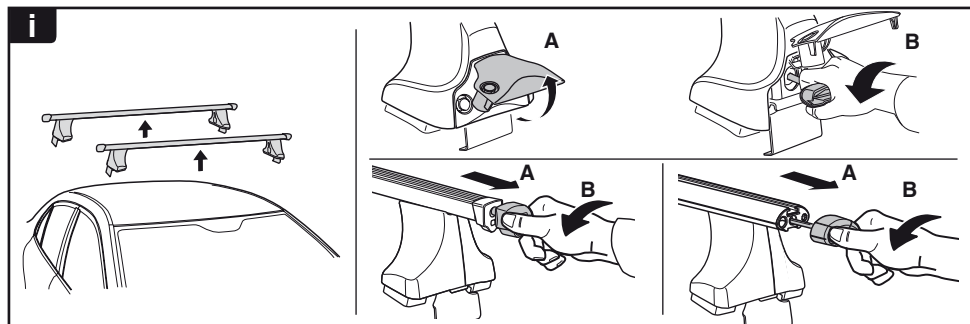     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

 
 
 
 
 
ASIA

 
 
 

www.thuleprofessional.com

 
customer.service@thule.com

info@thule.com

NA ▶  Thule Sweden AB, Box 69, 330 33 Hållerstorp, SWEDEN
Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

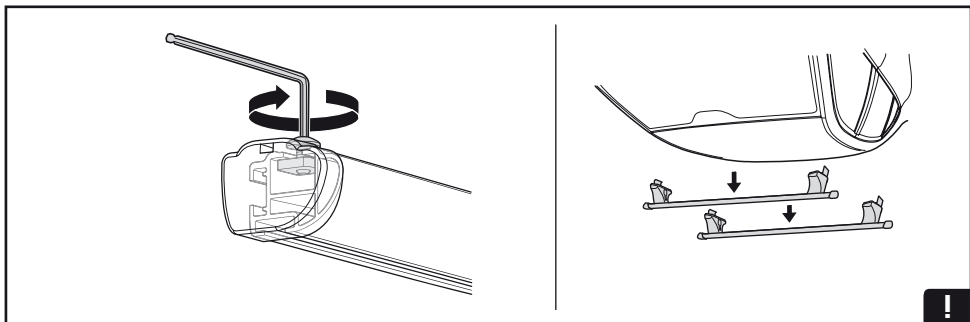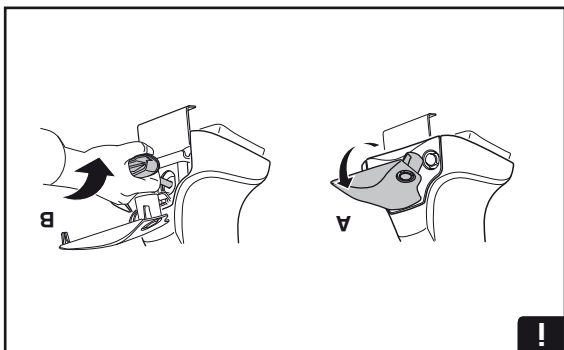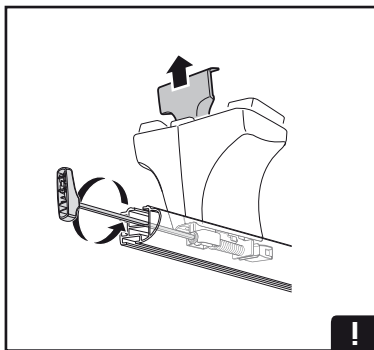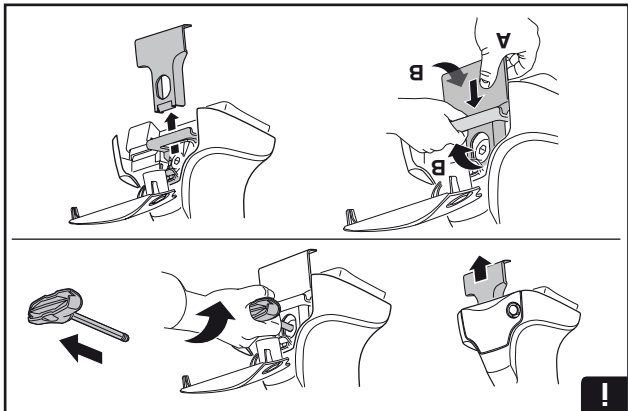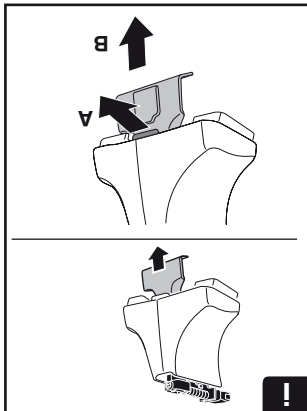


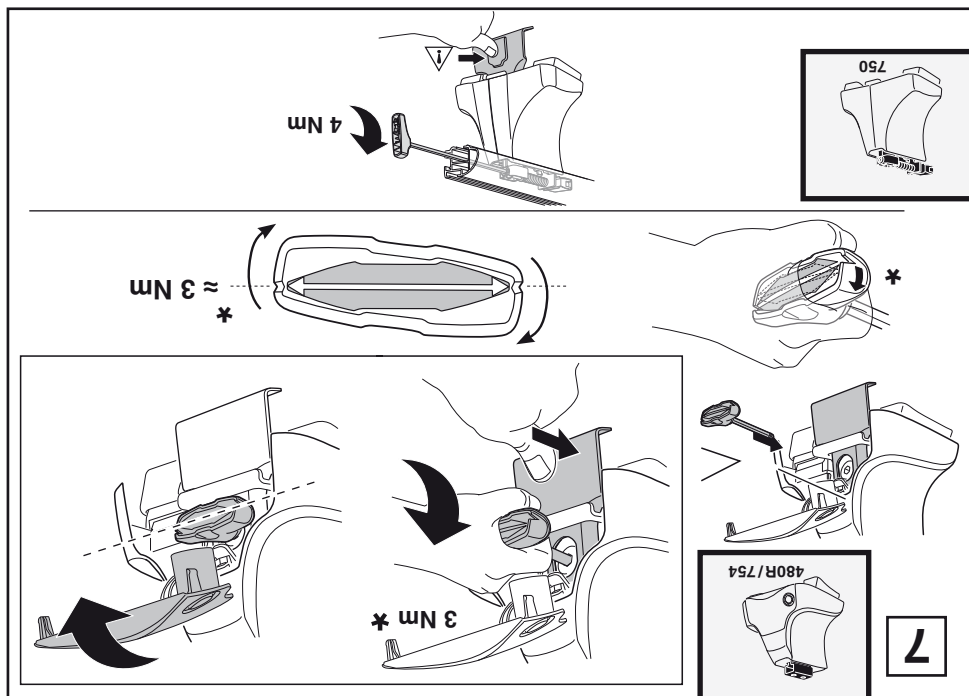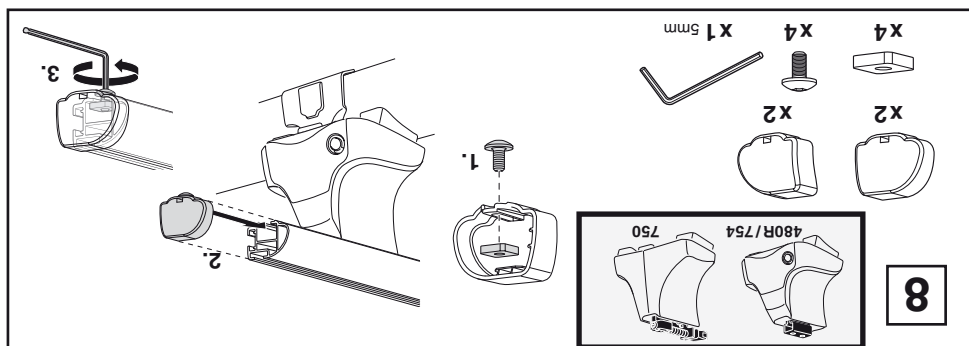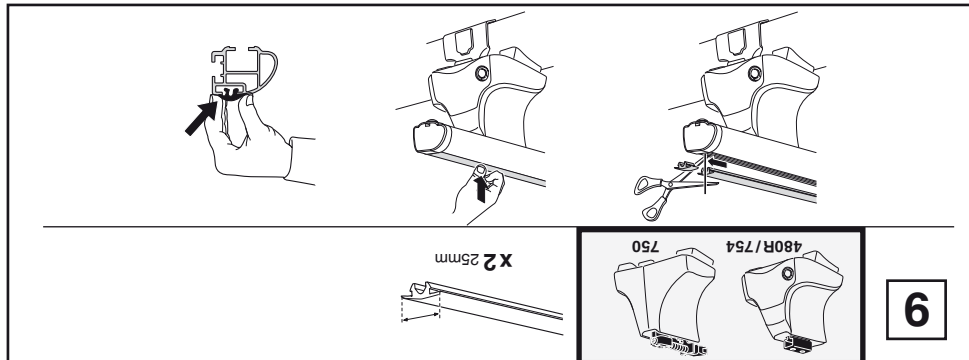

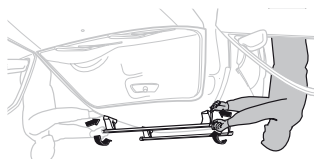


Die Schrauben abwechselnd
 tighten alternately
 anziehen
 Serrer alternatiewent chaque côté
 en de
 rechterkant draaienden
 Alternare i sseraggi di della viti
 Serrare alternativamente
 Dra it växelvis
 Kierra vuorotellen
 Pivetsidet växelvis!
 Pivetsidet pamtiss
 Uzskienkites pakakomis
 Sudy dokęgal naprzemiennie
 Zaitnyavite napremennno

 交番 警察
Dönüşüm sığın
Zephyre evlatı
Eğimsizdiği tüğgentülü
Narzımençino zalegnite
Privajije izmenično.
Doñahujie siredavo
Pókireja bagaznizka dokrečal
naprečenie nimeniannie.
交互に締め付けてください。
한글이 가나 조이시어오
தமிழனுபலா

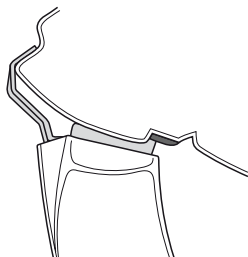


MITSUBISHI L 200, 4-dr Double Cab, 98-99
 MITSUBISHI Triton, 4-dr Double Cab, 98-99

280 mm	700 mm	11"	27 1/2"
280 mm	700 mm	11"	27 1/2"
X mm	Y mm	X inch	Y inch

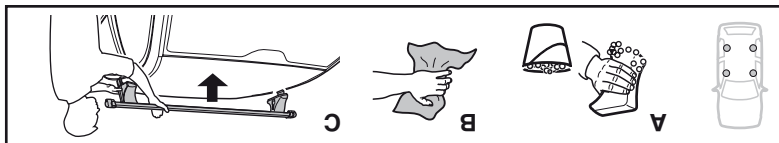 



9

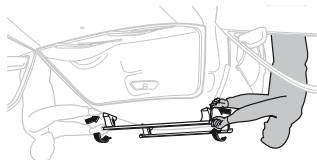 



GB/US Tighten alternately
D Die Schrauben abwechselnd
anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de
E Alternare il serraggio delle viti
PT Serrare alternativamente
S Dra át vřxřvřs
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pielciņiet pārtisus
LT Užskūnėkite pakaitomis
PL Śrubę dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokrýtá bagazníka dokręcaj
SK Dotiahnuť strečavo
SLO Serrer alternativement chaque côté
HU rechtekant aandraien
HR Afwisselend aan de linker- en de
HU Alternare il serraggio delle viti
PT Serrare alternativamente
S Dra át vřxřvřs
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pielciņiet pārtisus
LT Užskūnėkite pakaitomis
PL Śrubę dokręcaj naprzemiennie
RU Затягивайте попеременно

  中文 交替拧紧
日本語 交互に締め付けてください。
한국어 交互에 가며 조이십시오.
Dra át vřxřvřs
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pielciņiet pārtisus
LT Užskūnėkite pakaitomis
PL Śrubę dokręcaj naprzemiennie
RU Затягивайте попеременно

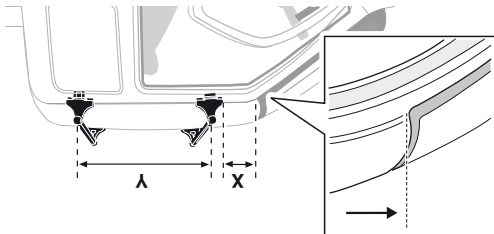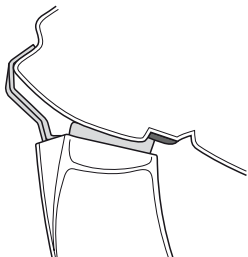


  MITSUBISHI L 200, 2-dr Extended Cab, 98-05
MITSUBISHI Triton, 2-dr Extended Cab, 98-05


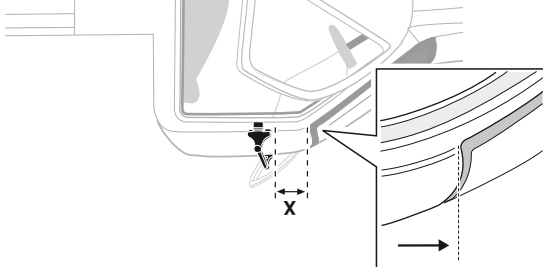
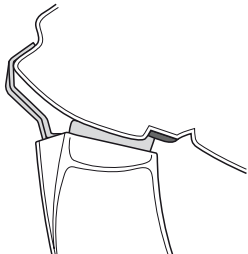





MITSUBISHI L 200, 2-dr Single Cab, 98-05
MITSUBISHI Triton, 2-dr Single Cab, 98-05

MITSUBISHI L 200, 2-dr Single Cab, 98-05	280 mm	-	11 "	27 1/2 "
MITSUBISHI L 200, 2-dr Extended Cab, 98-05	200 mm	700 mm	7 7/8 "	27 1/2 "
MITSUBISHI Triton, 2-dr Single Cab, 98-05	280 mm	-	11 "	-
MITSUBISHI Triton, 2-dr Extended Cab, 98-05	200 mm	700 mm	7 7/8 "	27 1/2 "


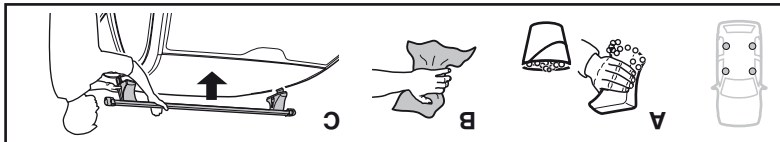 


     
 
MITSUBISHI L 200, 2-dr Extended Cab, 98-05
 MITSUBISHI L 200, 4-dr Double Cab, 98-99
 MITSUBISHI Triton, 2-dr Extended Cab, 98-05
 MITSUBISHI Triton, 4-dr Double Cab, 98-99

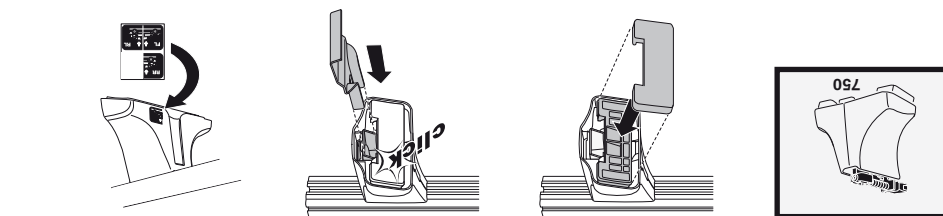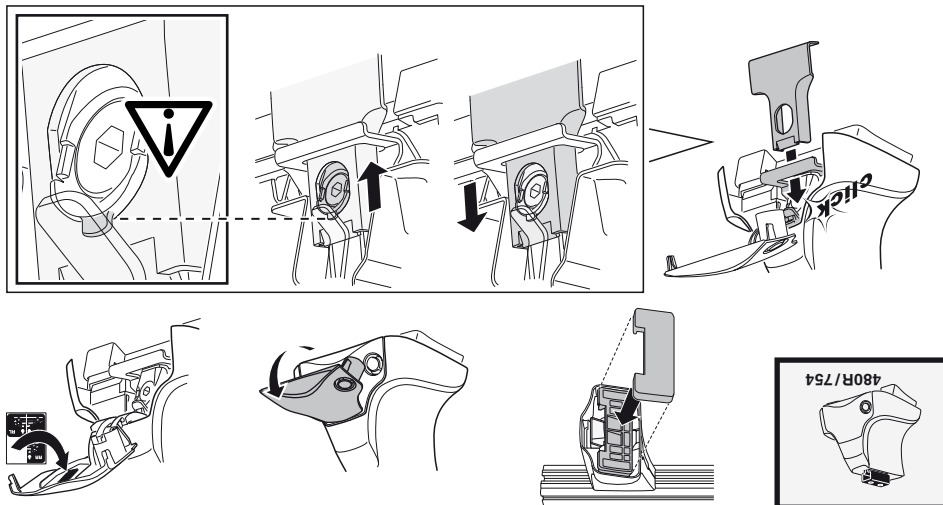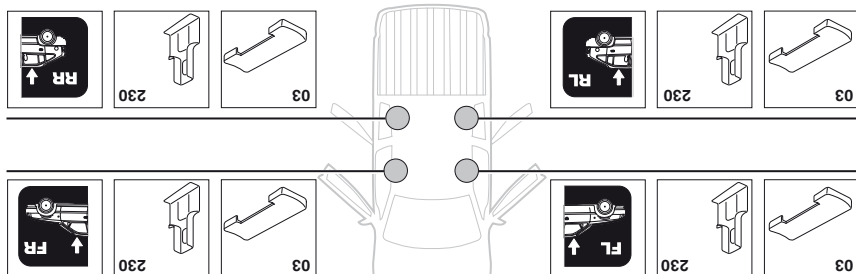

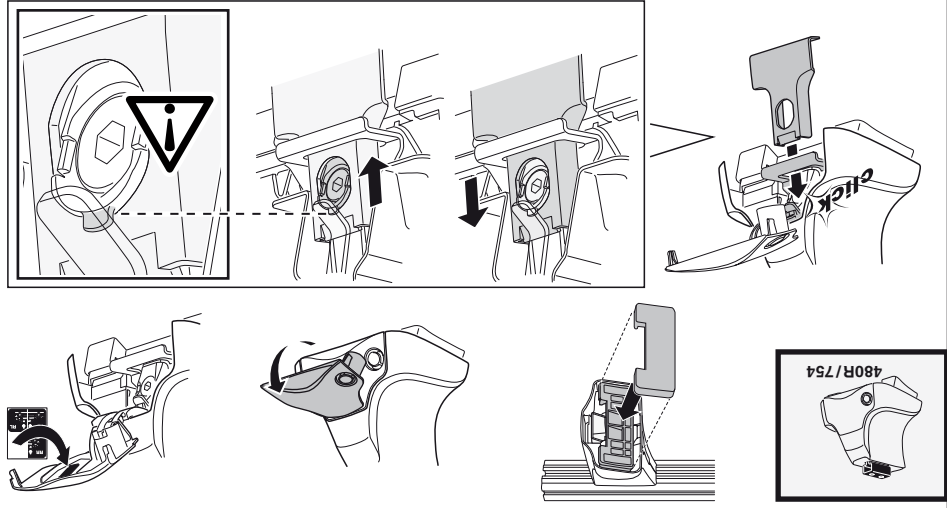
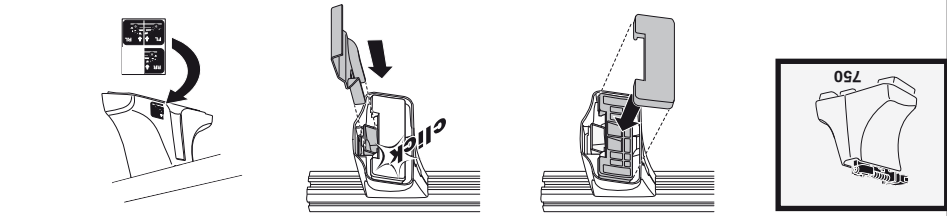


    MITSUBISHI L 200, 2-dr Single Cab, 98-05
MITSUBISHI Triton, 2-dr Single Cab, 98-05


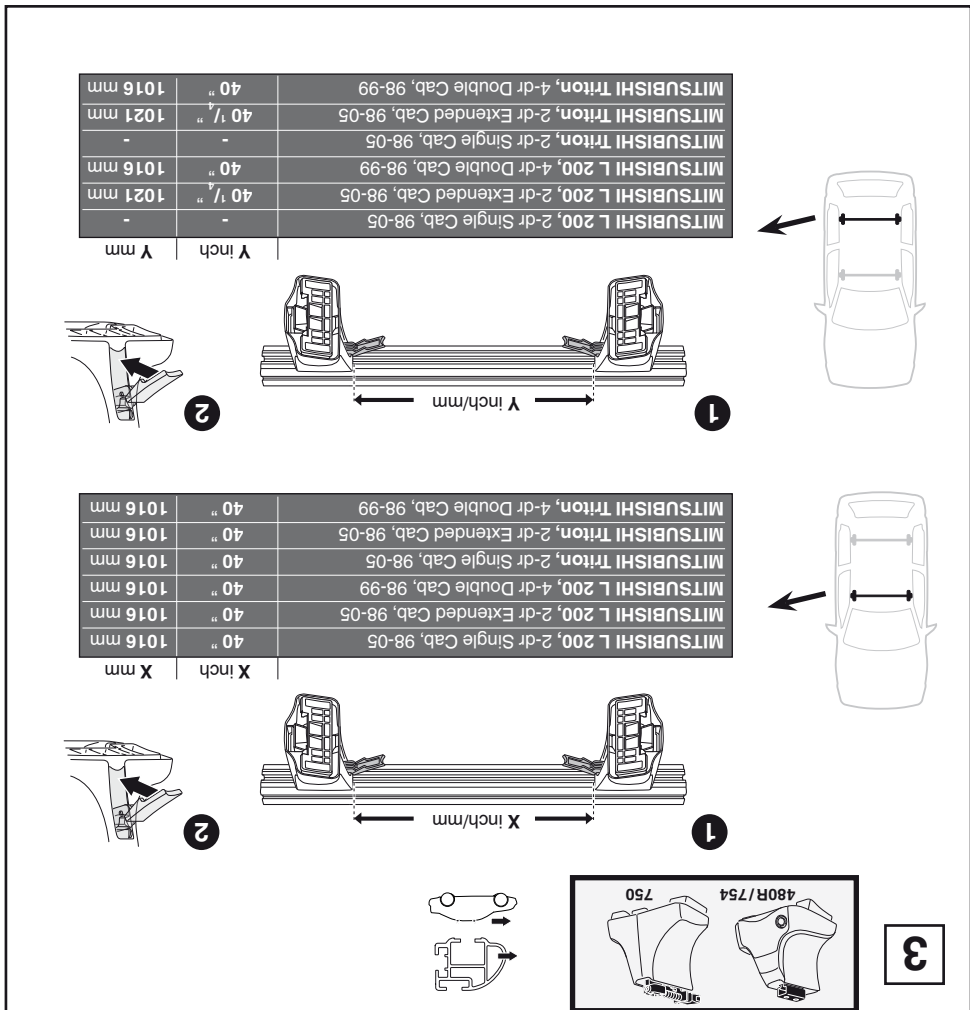
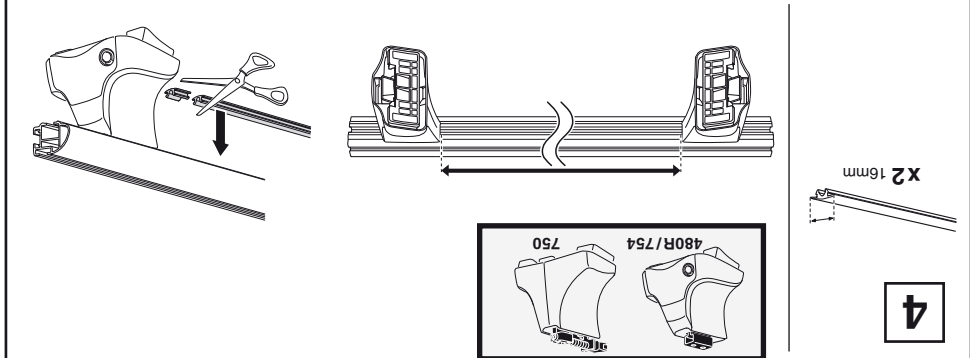


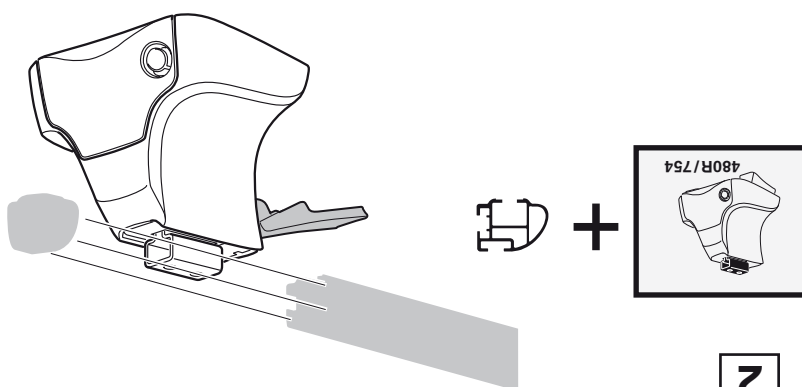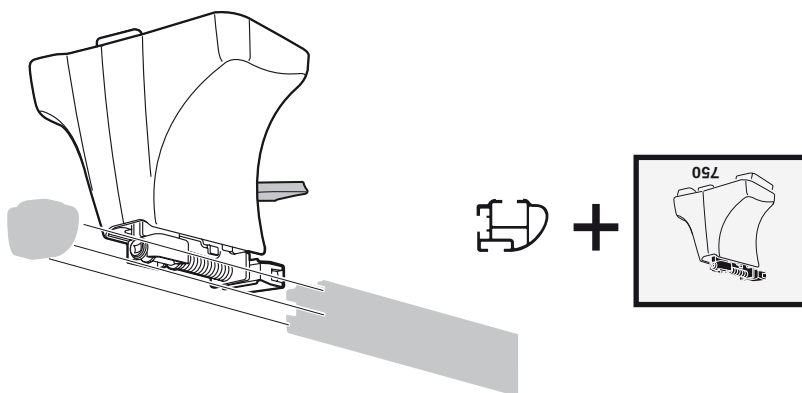

2

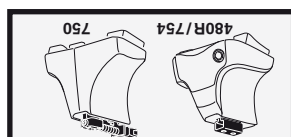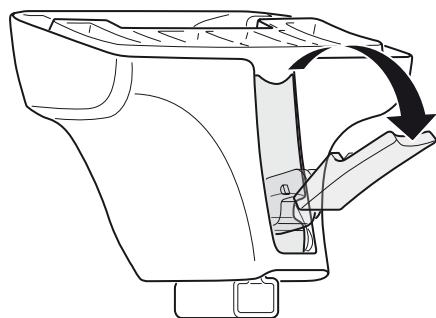  

1

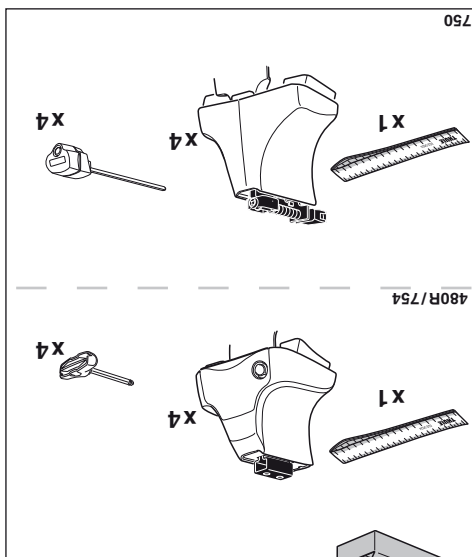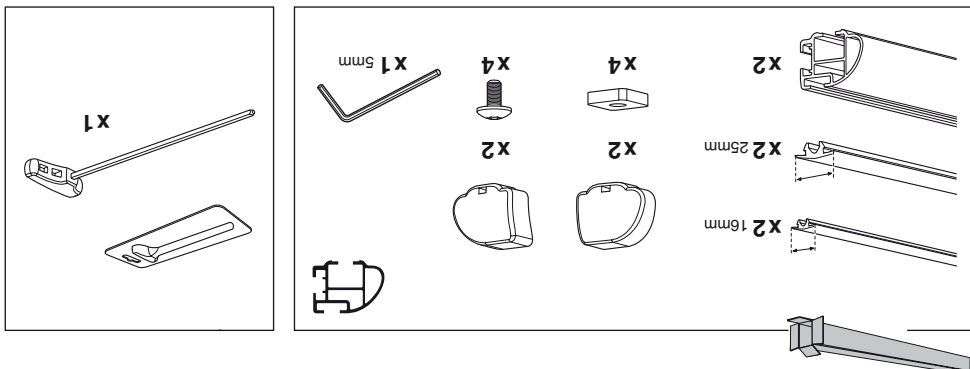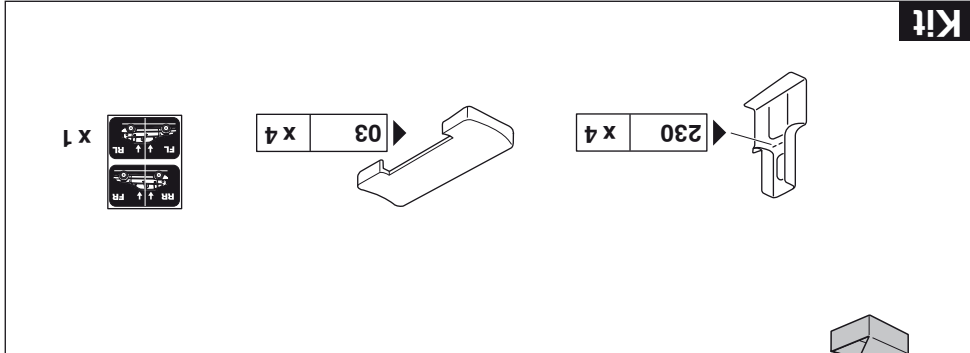   

THULE
Kit XXXX
Instructions

Warning icon: exclamation mark in a triangle.

2-dr Single Cab

3.5 kg / xx lbs

30kg/66 lbs

Max.

2-dr Extended Cab

7 kg / 15.4 lbs

75kg/165 lbs

Max.

4-dr Double Cab

7 kg / 15.4 lbs


75kg/165 lbs

Max.



instructions

Kit 1116

 
MITSUBISHI L 200, 2-dr Single Cab, 98-05
MITSUBISHI L 200, 2-dr Extended Cab, 98-05
MITSUBISHI L 200, 4-dr Double Cab, 98-99
MITSUBISHI Triton, 2-dr Single Cab, 98-05
MITSUBISHI Triton, 2-dr Extended Cab, 98-05
MITSUBISHI Triton, 4-dr Double Cab, 98-99

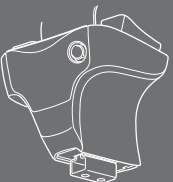

480R
754

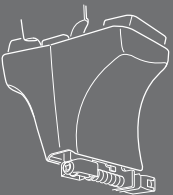  

750

 

ISO 11154-E

PROFESSIONAL

THULE
SWEDEN

®