 
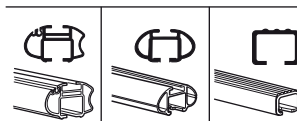 


Kit 1134

 
 
HONDA Accord, 4-dr Sedan, 99-02 (EUR)

HONDA Accord, 5-dr Hatchback, 00-02



480R
754

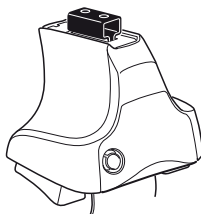

480

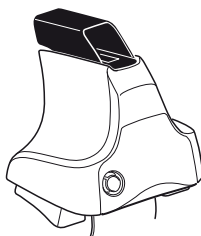






750

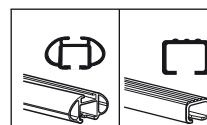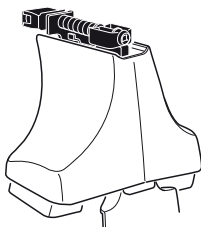  


THULE[®]
SWEDEN

ISO 11154-E

    
 
Kit

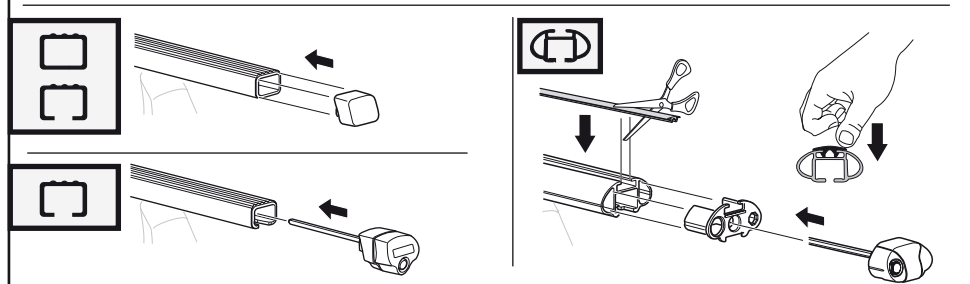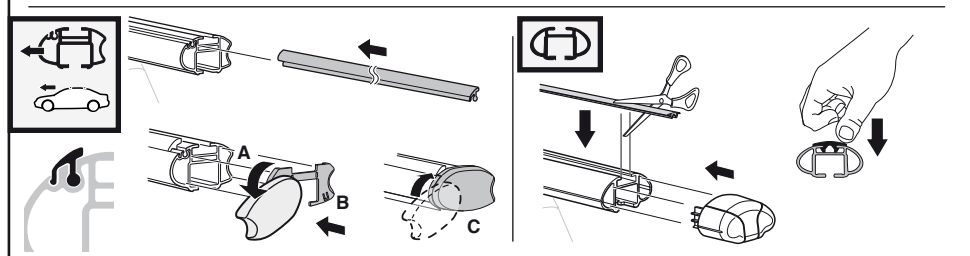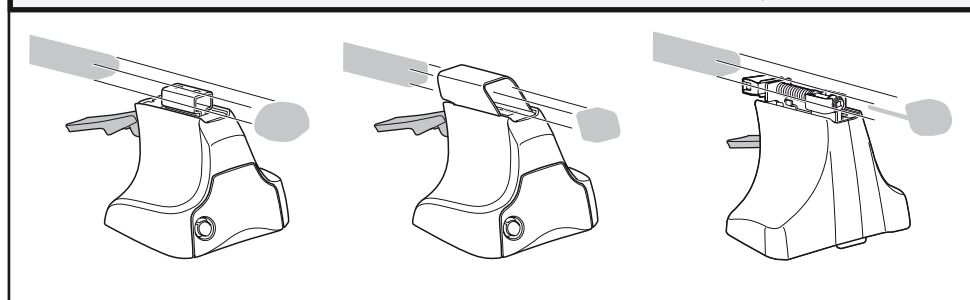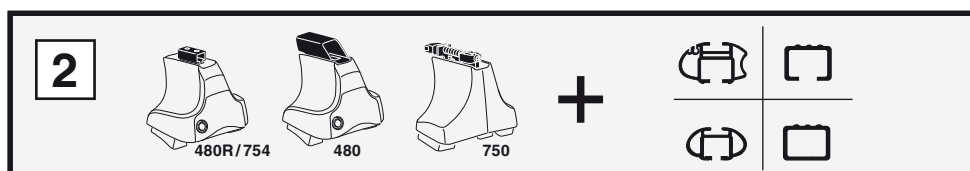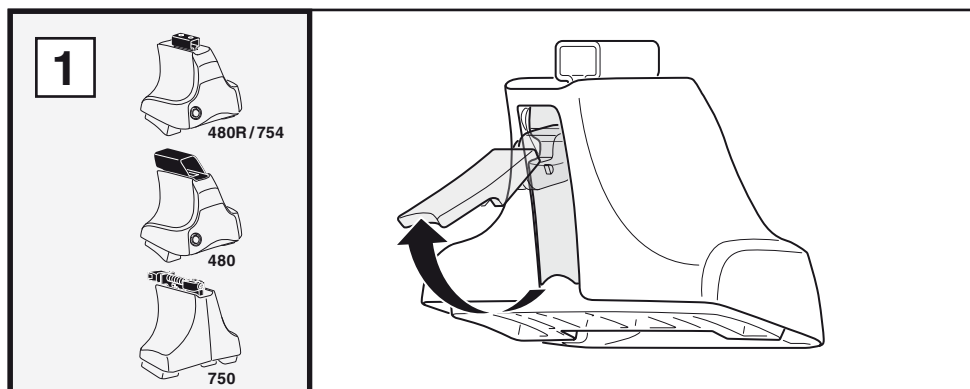

3

 



754

  


750



  1

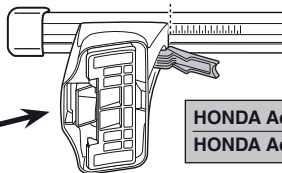

2

 


HONDA Accord, 4-dr Sedan, 99-02 (EUR)
HONDA Accord, 5-dr Hatchback, 00-02

X

28,5

28

 1

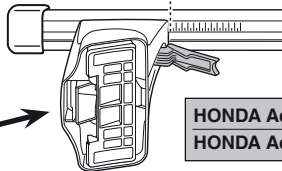

2



HONDA Accord, 4-dr Sedan, 99-02 (EUR)
HONDA Accord, 5-dr Hatchback, 00-02

Y

25,5

30

 


480R




480

1



2

 

HONDA Accord, 4-dr Sedan, 99-02 (EUR)
HONDA Accord, 5-dr Hatchback, 00-02

X inch

X mm

 
36 ⁷/₈ "

936 mm

36 ⁵/₈ "

931 mm

1



2



HONDA Accord, 4-dr Sedan, 99-02 (EUR)
HONDA Accord, 5-dr Hatchback, 00-02

Y inch

Y mm

35 ⁵/₈ "

906 mm

 
 
 
 
 
 
 
 
 
 
 
 
37 ¹/₂ "

951 mm


4

HONDA Accord, 4-dr Sedan, 99-02 (EUR)




HONDA Accord, 5-dr Hatchback, 00-02

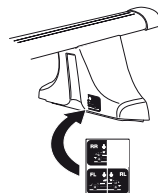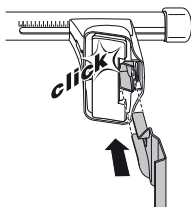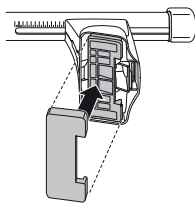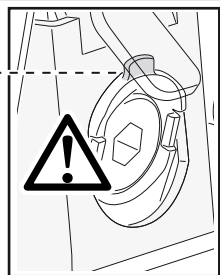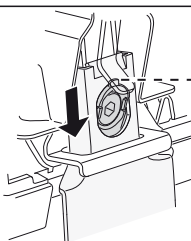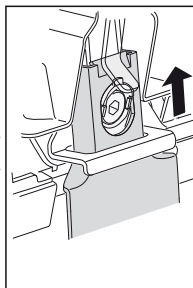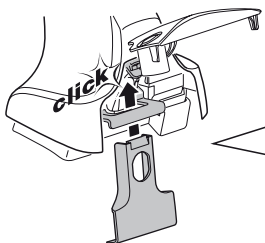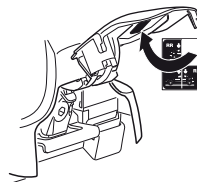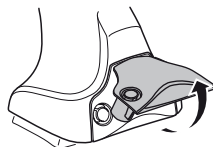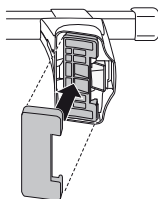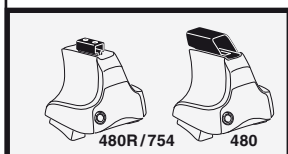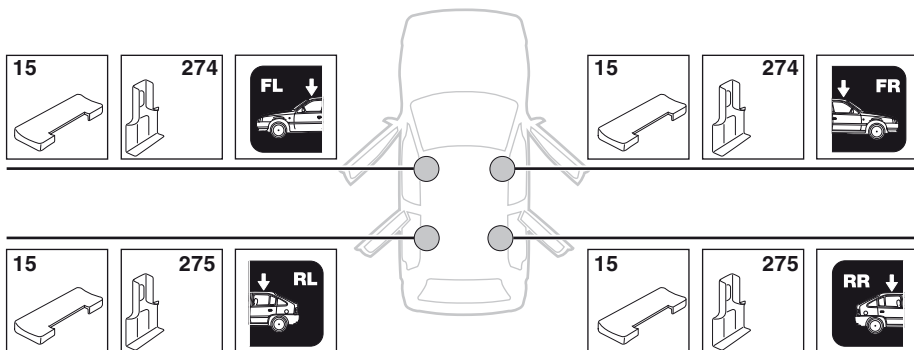

5

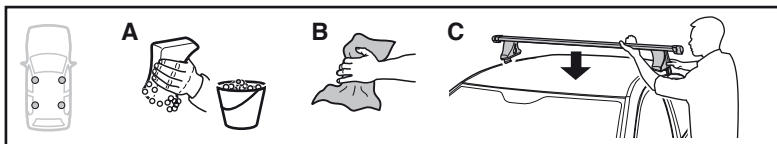 

	X mm	Y mm	X inch	Y inch
HONDA Accord, 4-dr Sedan, 99-02 (EUR)	220 mm	640 mm	8 5/8"	25 1/4"
HONDA Accord, 5-dr Hatchback, 00-02	220 mm	640 mm	8 5/8"	25 1/4"

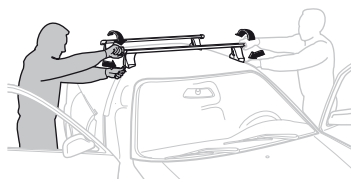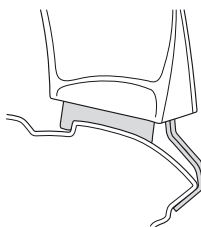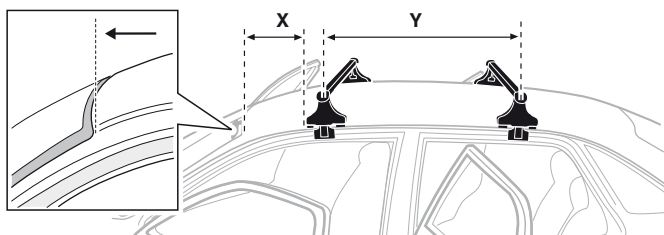   

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciēt pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

 
 
 
 
 
6





480R/754



480

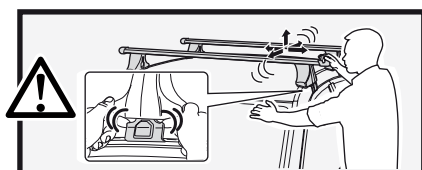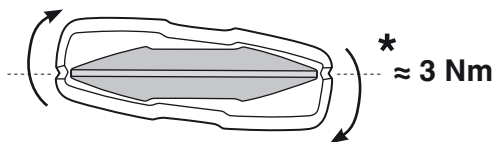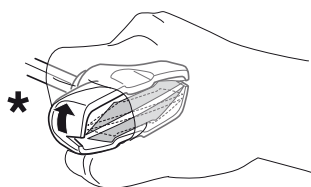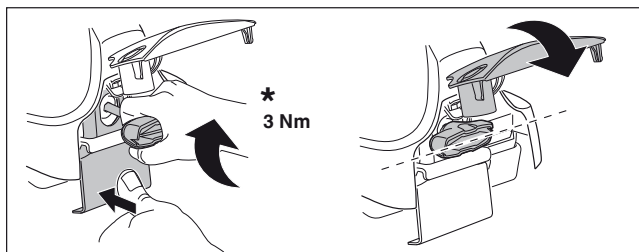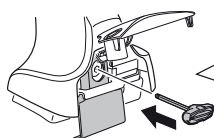

750

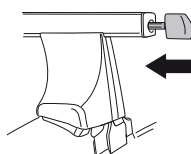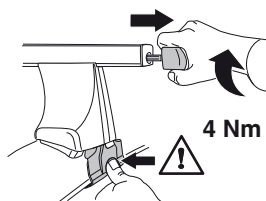  


i




1



 
2

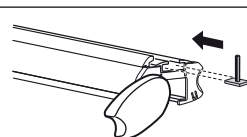


i

 


1

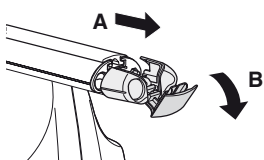 


2

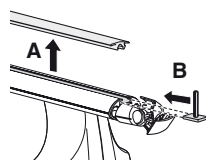 


i





 


1

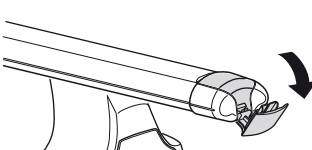 

2

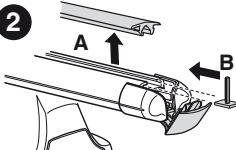 

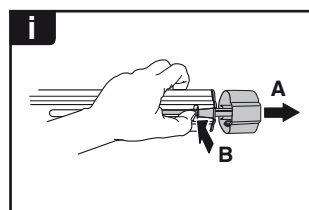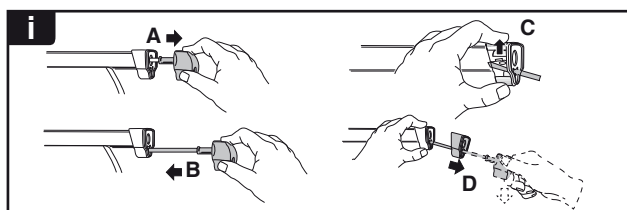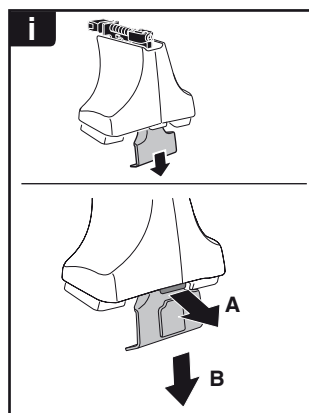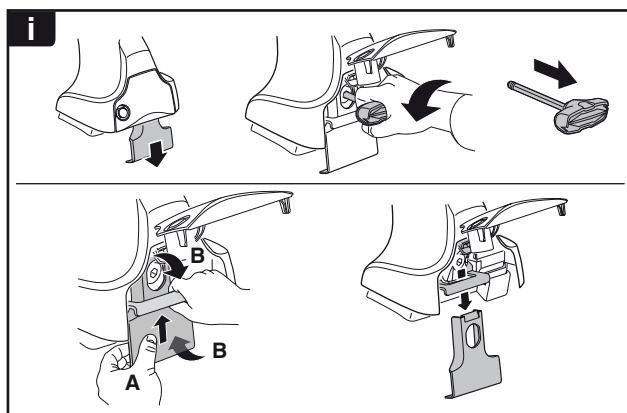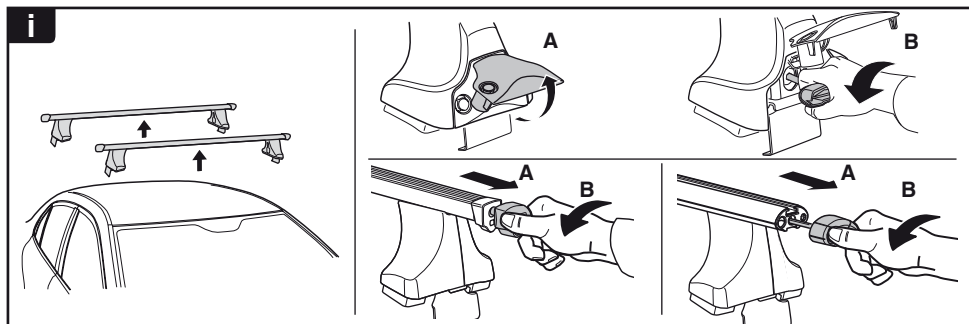     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		