

Kit 1221

HYUNDAI Avante, 4-dr Sedan, 00-02, 03-06

HYUNDAI Avante, 5-dr Hatchback, 00-02, 03-06

 
 
 
HYUNDAI Elantra, 4-dr Sedan, 00-02, 03-06 / *01-06

HYUNDAI Elantra, 5-dr Hatchback, 00-02, 03-06 / *01-06

HYUNDAI Lantra, 4-dr Sedan, 00-02, 03-06

HYUNDAI Lantra, 5-dr Hatchback, 00-02, 03-06

*North America

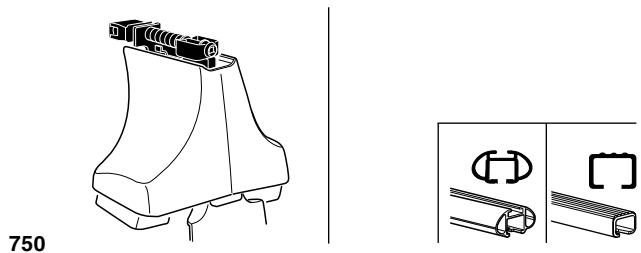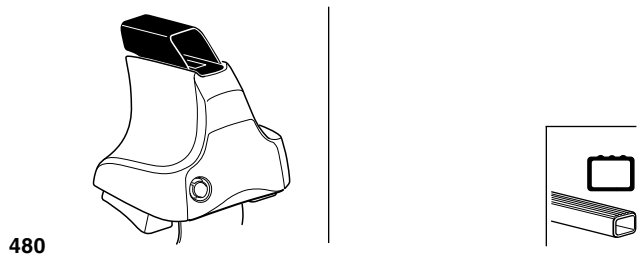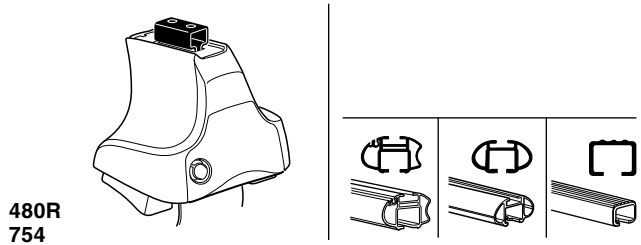

THULE®
SWEDEN

ISO 11154-E

480R/754

480

750



 
 
 
 
 
 
 
 
 
					
					
					
					
					
					
					
					
					

Diagram illustrating the assembly of the front panel components:


 
- Component 11 (x 2): Two vertical mounting brackets.
- Component 320 (x 2): Two horizontal mounting rails.
- Component 04 (x 2): Two L-shaped corner brackets.
- Component 19 (x 2): Two horizontal mounting rails.
- Component 1 (x 1): One front panel with directional indicators (FR, FL, RL, RR).

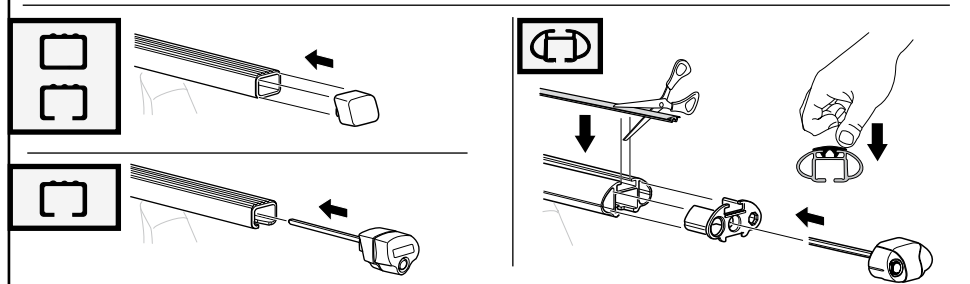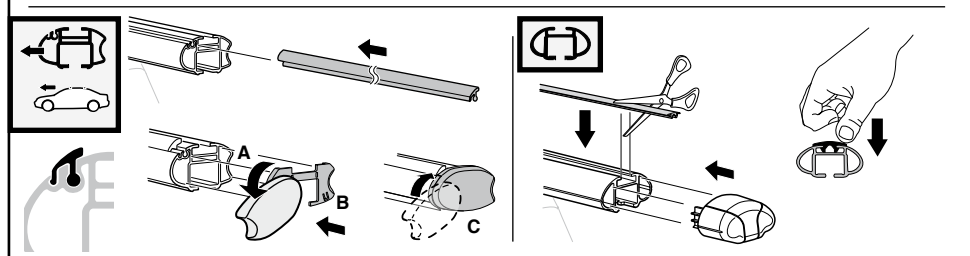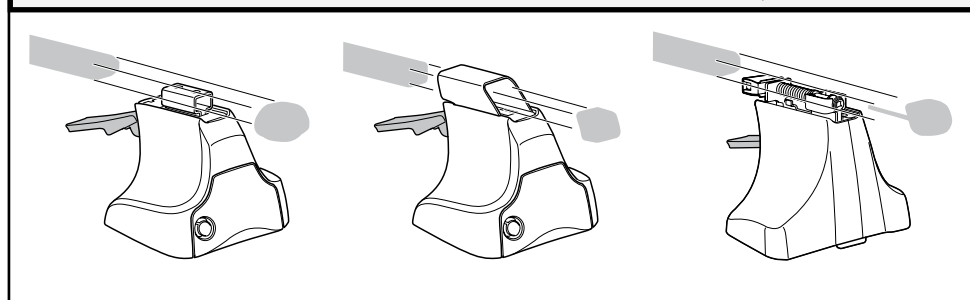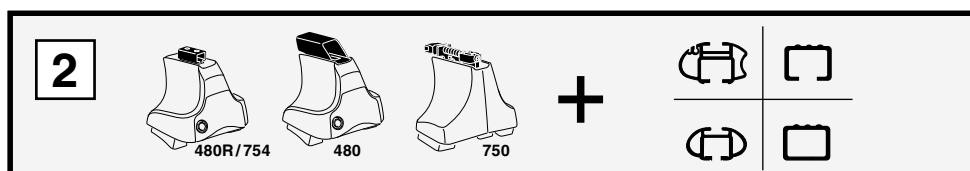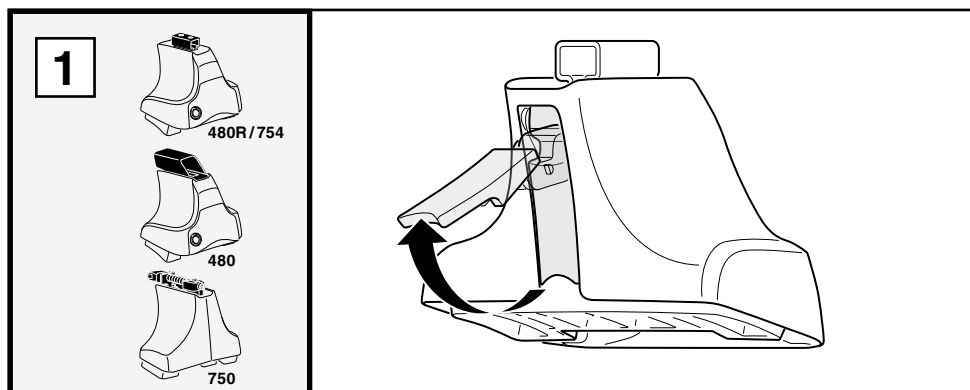

3


 


754

  


750

  1

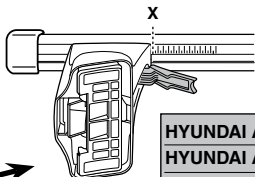


2

 

X

HYUNDAI Avante, 4-dr Sedan, 00-02, 03-06	33.5
HYUNDAI Avante, 5-dr Hatchback, 00-02, 03-06	33.5
HYUNDAI Elantra, 4-dr Sedan, 00-02, 03-06 / *01-06	33.5
HYUNDAI Elantra, 5-dr Hatchback, 00-02, 03-06 / *01-06	33.5
HYUNDAI Lantra, 4-dr Sedan, 00-02, 03-06	33.5
HYUNDAI Lantra, 5-dr Hatchback, 00-02, 03-06	33.5

 1

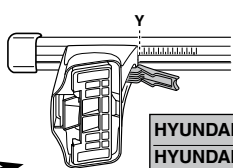


2



Y

HYUNDAI Avante, 4-dr Sedan, 00-02, 03-06	34.5
HYUNDAI Avante, 5-dr Hatchback, 00-02, 03-06	35
HYUNDAI Elantra, 4-dr Sedan, 00-02, 03-06 / *01-06	34.5
HYUNDAI Elantra, 5-dr Hatchback, 00-02, 03-06 / *01-06	35
HYUNDAI Lantra, 4-dr Sedan, 00-02, 03-06	34.5
HYUNDAI Lantra, 5-dr Hatchback, 00-02, 03-06	35

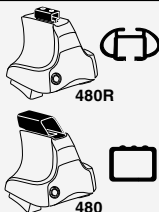 


480R




480

 1



2

 


X inch

X mm

HYUNDAI Avante, 4-dr Sedan, 00-02, 03-06	38 ⁷ / ₈ "	986 mm
HYUNDAI Avante, 5-dr Hatchback, 00-02, 03-06	38 ⁷ / ₈ "	986 mm
HYUNDAI Elantra, 4-dr Sedan, 00-02, 03-06 / *01-06	38 ⁷ / ₈ "	986 mm
HYUNDAI Elantra, 5-dr Hatchback, 00-02, 03-06 / *01-06	38 ⁷ / ₈ "	986 mm
HYUNDAI Lantra, 4-dr Sedan, 00-02, 03-06	38 ⁷ / ₈ "	986 mm
HYUNDAI Lantra, 5-dr Hatchback, 00-02, 03-06	38 ⁷ / ₈ "	986 mm

 1



2



Y inch

Y mm

HYUNDAI Avante, 4-dr Sedan, 00-02, 03-06	39 ¹ / ₄ "	996 mm
HYUNDAI Avante, 5-dr Hatchback, 00-02, 03-06	39 ³ / ₈ "	1001 mm
HYUNDAI Elantra, 4-dr Sedan, 00-02, 03-06 / *01-06	39 ¹ / ₄ "	996 mm
HYUNDAI Elantra, 5-dr Hatchback, 00-02, 03-06 / *01-06	39 ³ / ₈ "	1001 mm
HYUNDAI Lantra, 4-dr Sedan, 00-02, 03-06	39 ¹ / ₄ "	996 mm
HYUNDAI Lantra, 5-dr Hatchback, 00-02, 03-06	39 ³ / ₈ "	1001 mm

4

HYUNDAI Avante, 4-dr Sedan, 00-02, 03-06

 
 
 
 
 
 
 
 
 
 
 
 
HYUNDAI Avante, 5-dr Hatchback, 00-02, 03-06

HYUNDAI Elantra, 4-dr Sedan, 00-02, 03-06 / *01-06


HYUNDAI Elantra, 5-dr Hatchback, 00-02, 03-06 / *01-06

HYUNDAI Lantra, 4-dr Sedan, 00-02, 03-06



HYUNDAI Lantra, 5-dr Hatchback, 00-02, 03-06

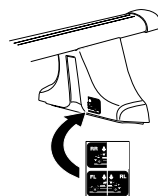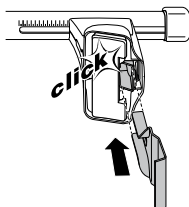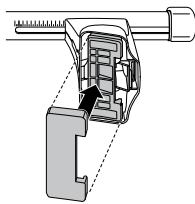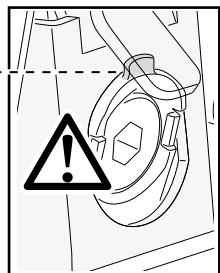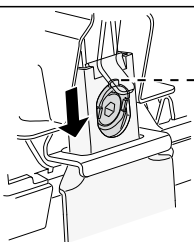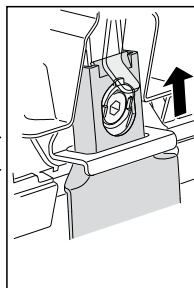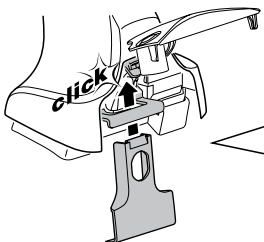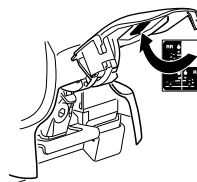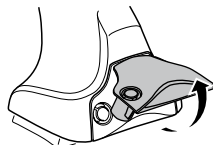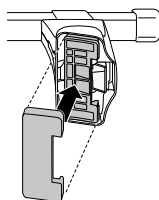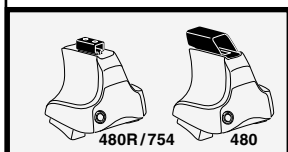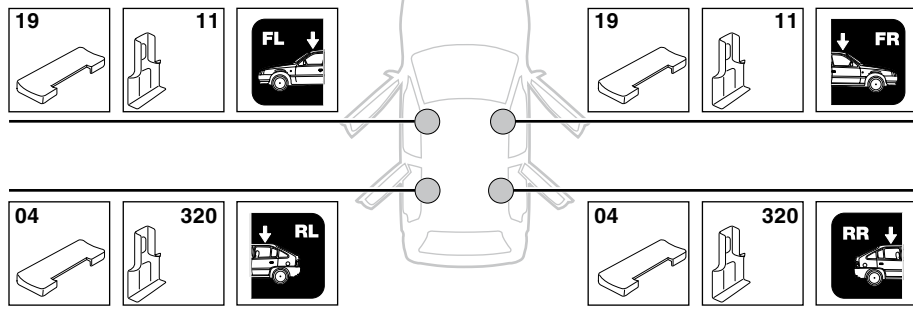

5

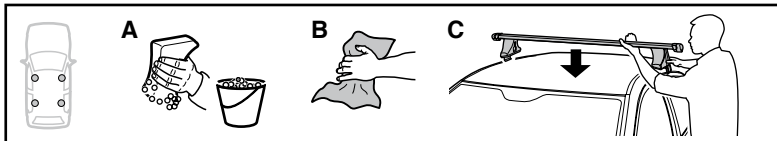 

	X mm	Y mm	X inch	Y inch
HYUNDAI Avante, 4-dr Sedan, 00-02, 03-06	200 mm	650 mm	7 ⁷ / ₈ "	25 ⁵ / ₈ "
HYUNDAI Avante, 5-dr Hatchback, 00-02, 03-06	200 mm	700 mm	7 ⁷ / ₈ "	27 ¹ / ₂ "
HYUNDAI Elantra, 4-dr Sedan, 00-02, 03-06 / *01-06	200 mm	650 mm	7 ⁷ / ₈ "	25 ⁵ / ₈ "
HYUNDAI Elantra, 5-dr Hatchback, 00-02, 03-06 / *01-06	200 mm	700 mm	7 ⁷ / ₈ "	27 ¹ / ₂ "
HYUNDAI Lantra, 4-dr Sedan, 00-02, 03-06	200 mm	650 mm	7 ⁷ / ₈ "	25 ⁵ / ₈ "
HYUNDAI Lantra, 5-dr Hatchback, 00-02, 03-06	200 mm	700 mm	7 ⁷ / ₈ "	27 ¹ / ₂ "

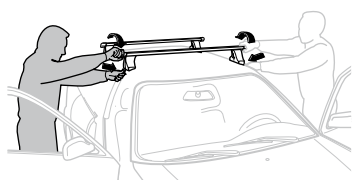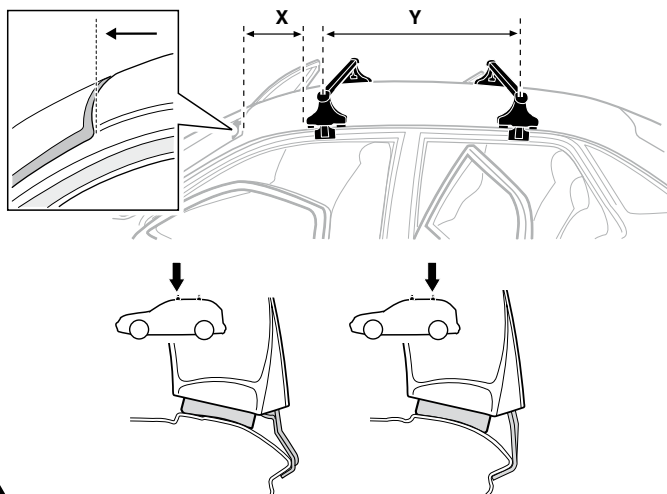  

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชั้นในแบบสลับ






6













480R/754








     480

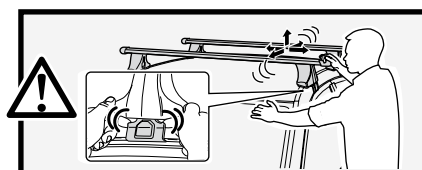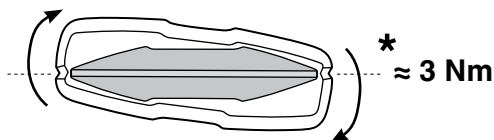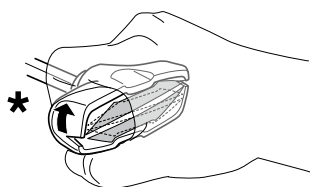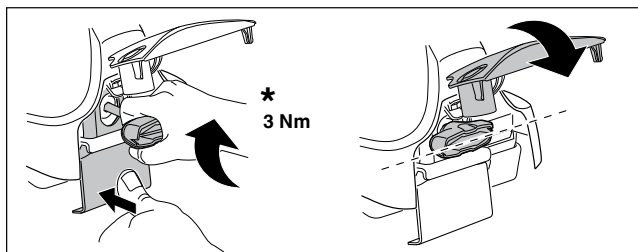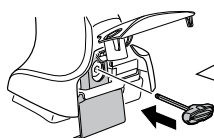

750

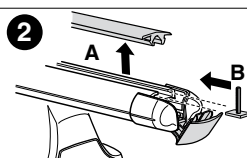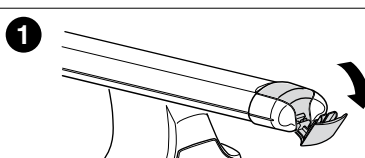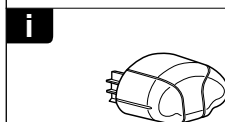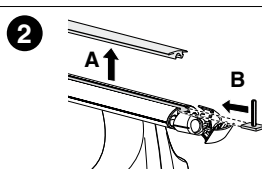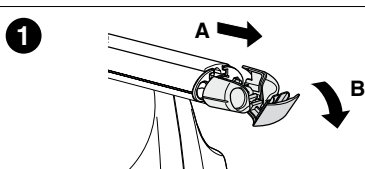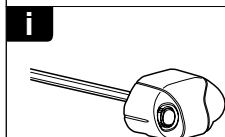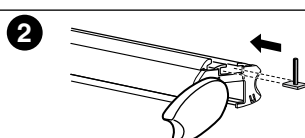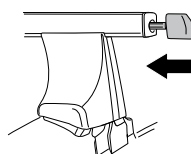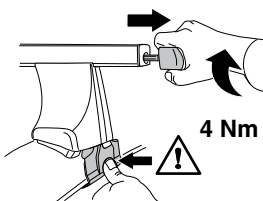          

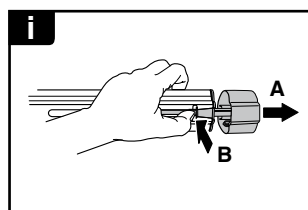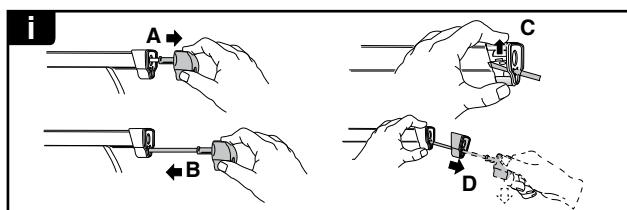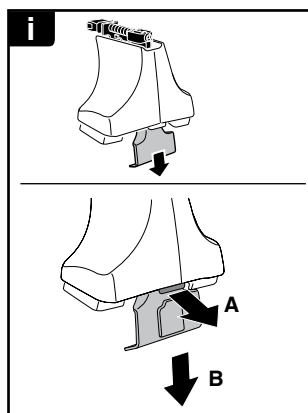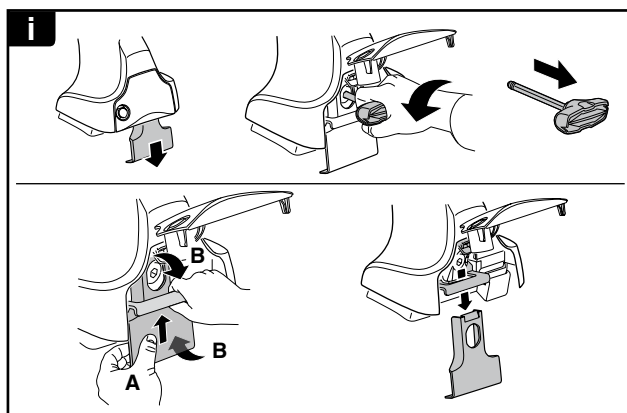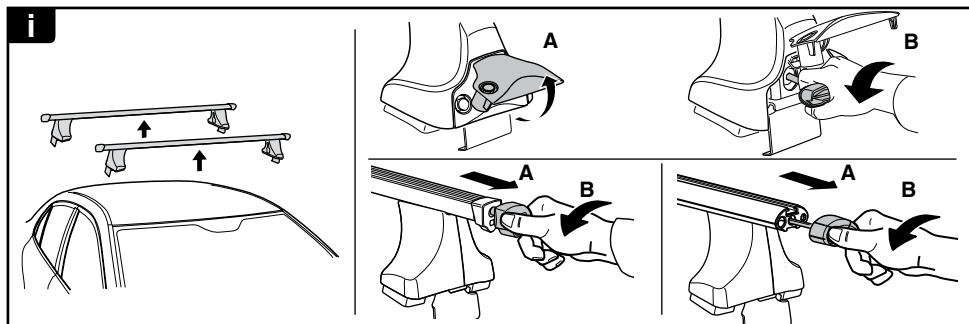     

THULE
SWEDEN

**ONE
KEY
SYSTEM**

		544	(x4)
		596	(x6)
		588	(x8)
NA		510	(x10)
EUR		452	(x12)
ASIA			