 
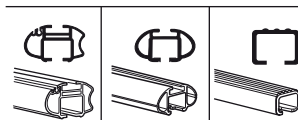 



Kit 1404

MITSUBISHI 380, 4-dr Sedan, 05-08



480R
754

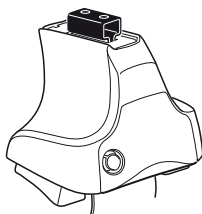

 480

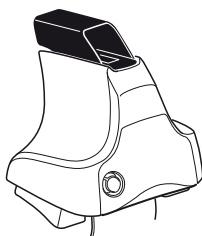

750

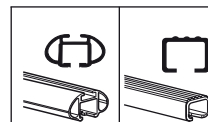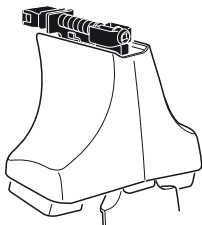  

THULE[®]
SWEDEN

ISO 11154-E

**Max.
60kg**
**Max.
132 lbs**

Kit XXXX
instructions

480R/754

480






750

x2 x2 x2 x4	x2	x2 x2 x4 x4	x2 x2 x2	x2
----------------------	----	----------------------	----------------	----




667 x 1	766 x 1	19 x 2
669 x 1	767 x 1	68 x 1
		69 x 1

Kit

    
 
x 1

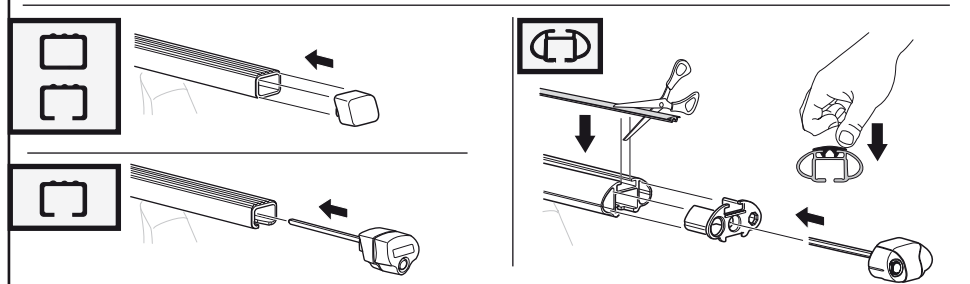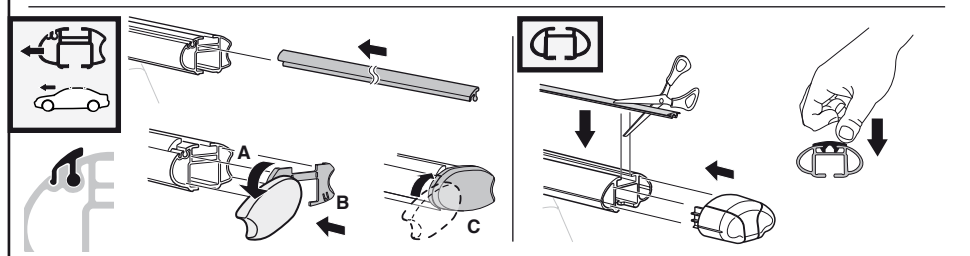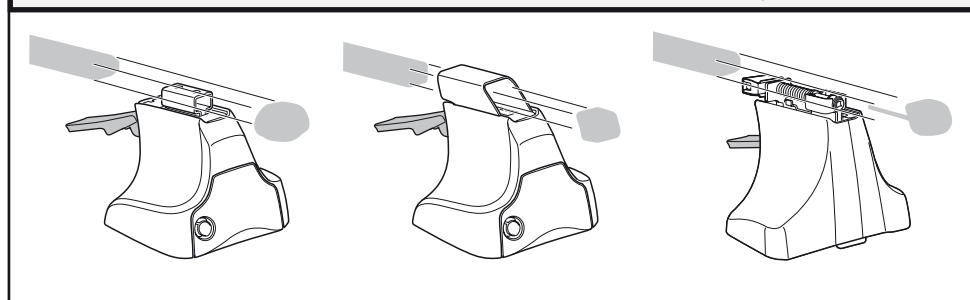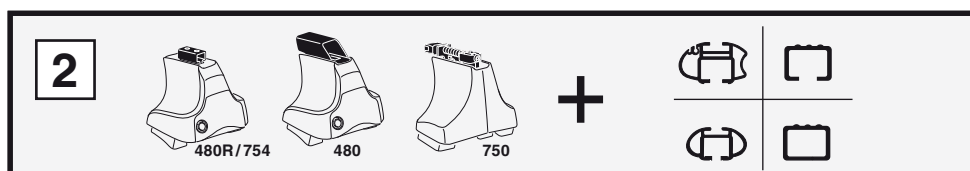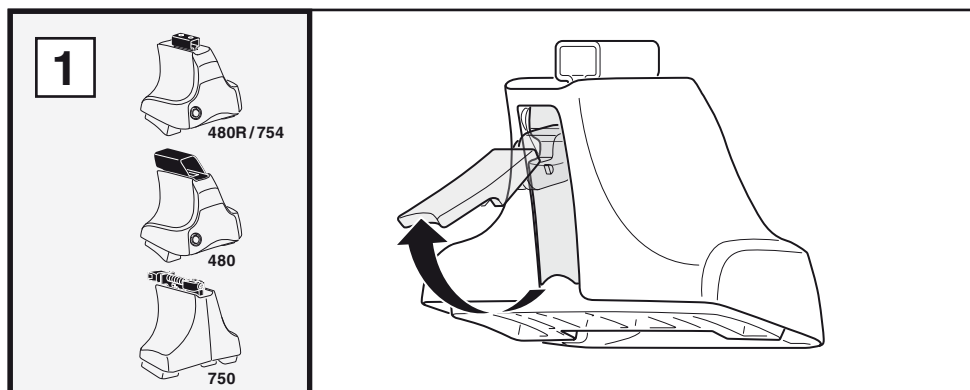

3

   

1

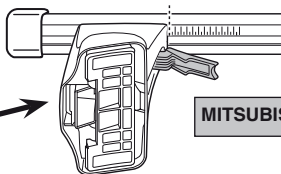  

2

 


MITSUBISHI 380, 4-dr Sedan, 05-08

X

45

1

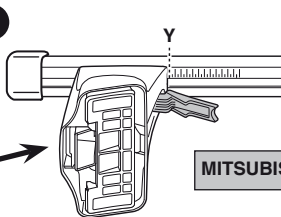

2



MITSUBISHI 380, 4-dr Sedan, 05-08

Y

39

 


480R




480

1



2

 

MITSUBISHI 380, 4-dr Sedan, 05-08

 
X inch

X mm


43 $\frac{3}{8}$ "

1101 mm

1



2

 

MITSUBISHI 380, 4-dr Sedan, 05-08

Y inch

 
 
 
 
 
 
 
 
 
 
 
 
 
Y mm

41 "


1041 mm

4





MITSUBISHI 380, 4-dr Sedan, 05-08

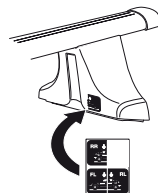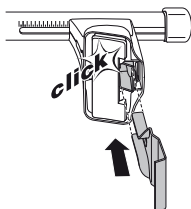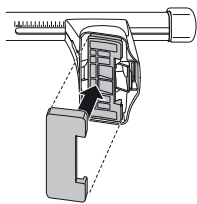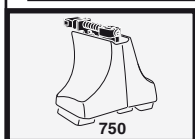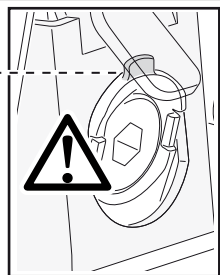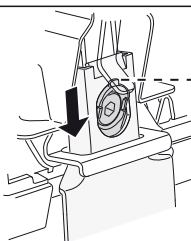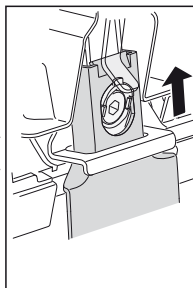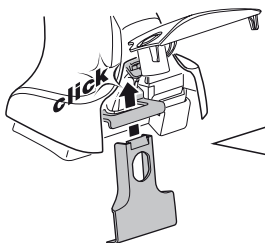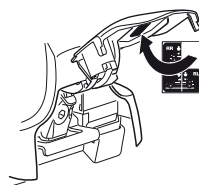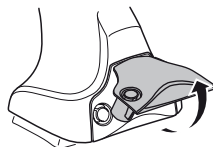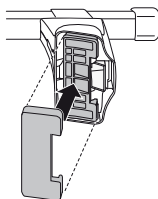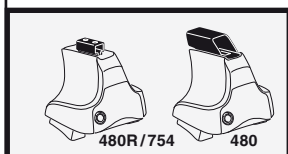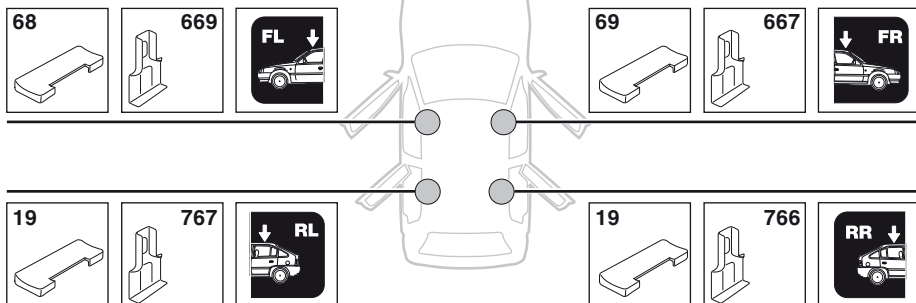

5

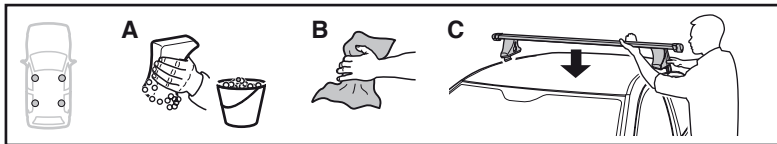 

	X mm	Y mm	X inch	Y inch
MITSUBISHI 380, 4-dr Sedan, 05-08	250 mm	750 mm	9 7/8"	29 1/2"

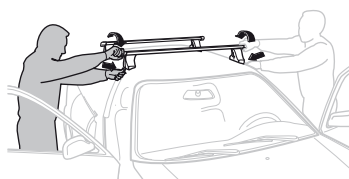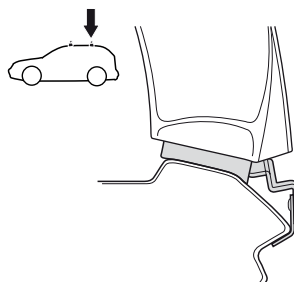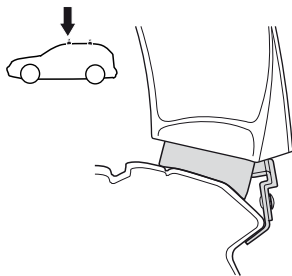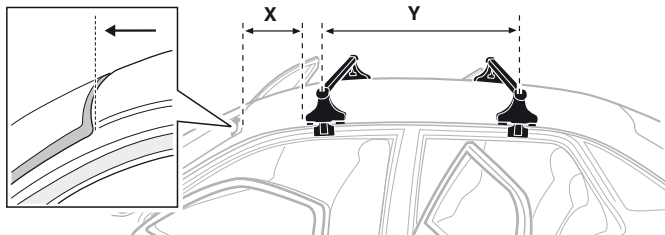    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apertar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

 
 
6






480R/754








480

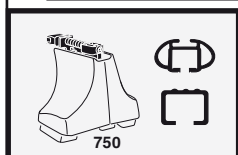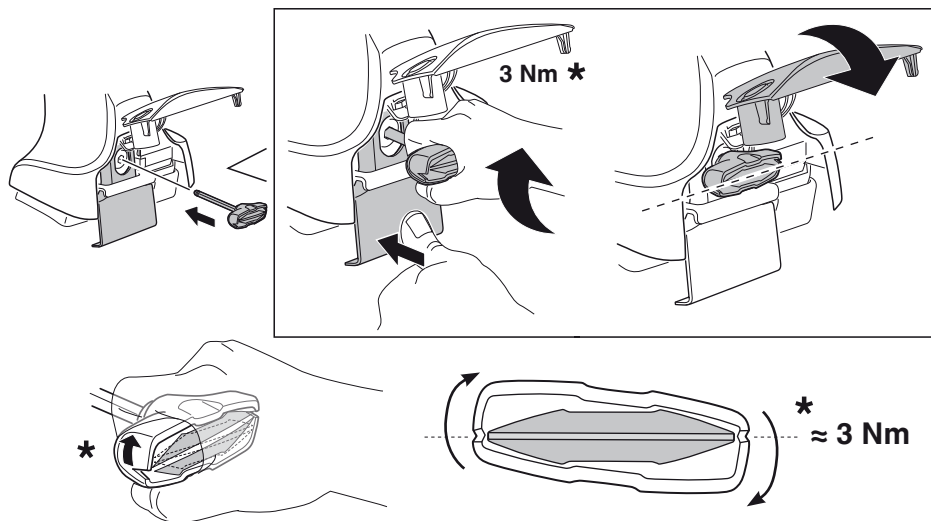

750

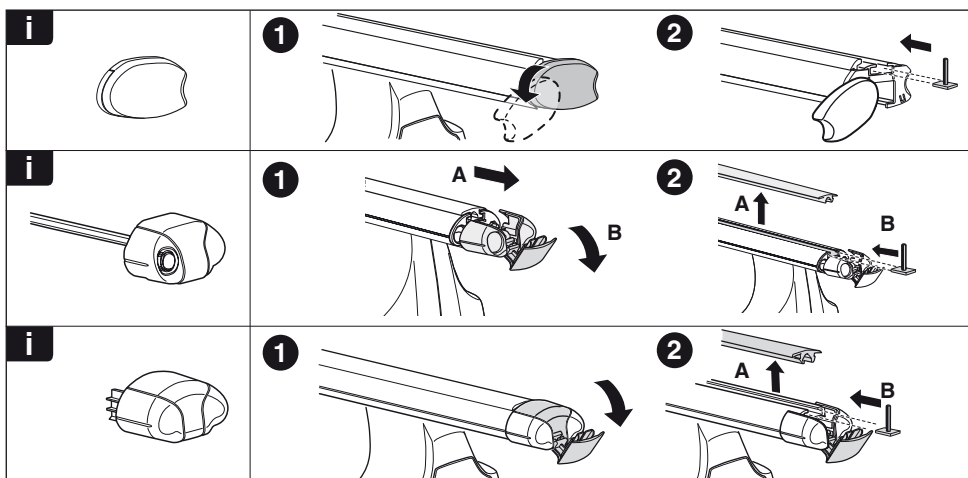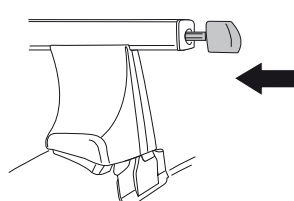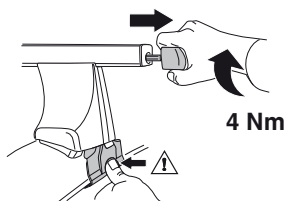   

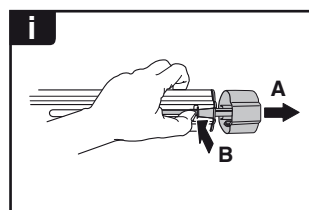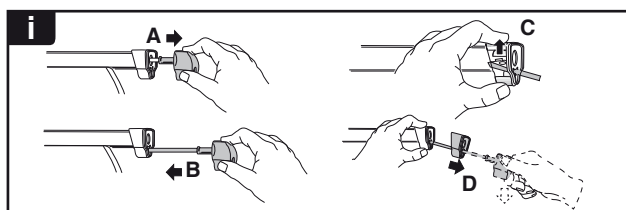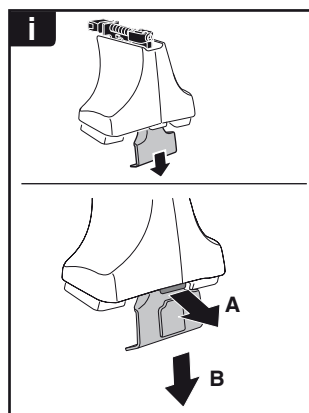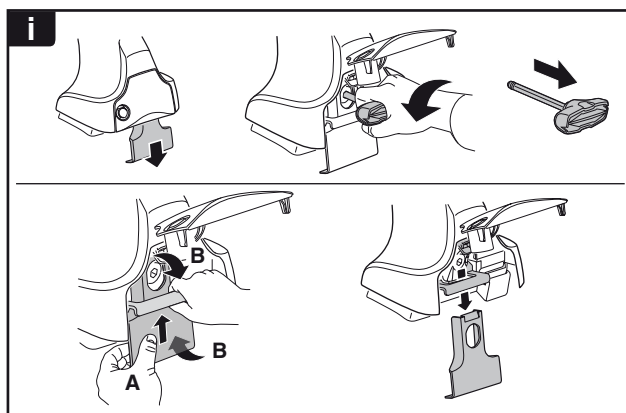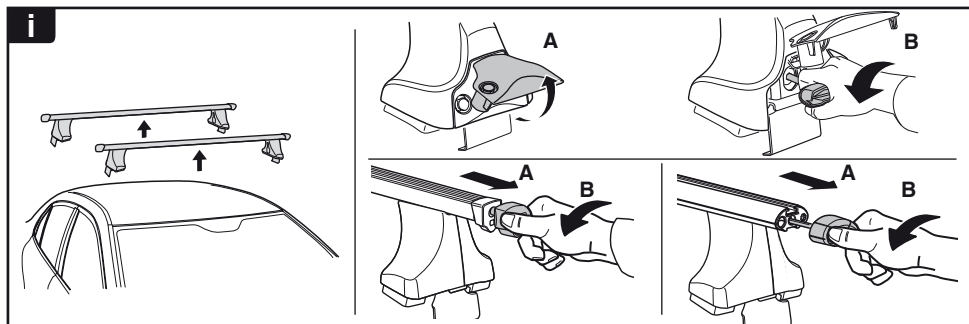     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		