


Important:

Please read these instructions carefully prior to installation.

Please refer to your fitting instruction to ensure that the light bracket is installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies.

Place these instructions in the vehicle's glove box after installation is complete.

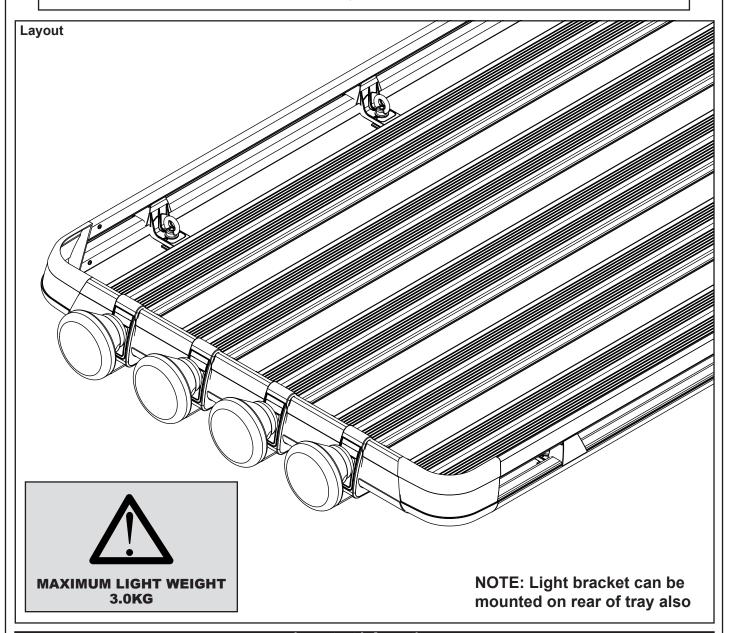

Important Information

Please remove Alloy Tray Light Bracket, Alloy Tray and Roof Racks when putting vehicle through an automatic car wash.

Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client

Rhino-Rack

3 Pike Street, Rydalmere, NSW 2116, Australia.

(Ph) (02) 9638 4744 (Fax) (02) 9638 4822 Document No: RR232 Prepared By: Andy Wana

Authorised By: Gary England

Issue No: 01


Issue Date: 03/12/2009

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.



Parts List

Item	Component Name	Qty	Part No
1	M6 X 16 Security Bolt	1	B061
2	M6 X 16 Flat Washer	2	W031
3	Clamp	1	A471
4	Plate	1	C801
5	M6 Nyloc Nut	1	N013
6	Spotlight Bracket Top	1	M476
7	Spotlight Bracket Bottom	1	M477
8	Allen Key	1	SECKEY-S
9	Fitting Instructions	1	RR232

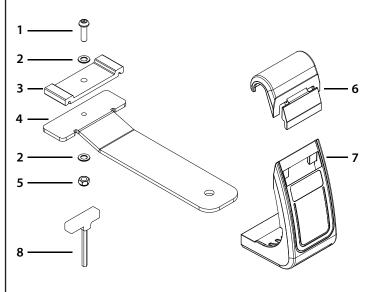

Care Instruction:

Wash and clean alloy tray prior to fitment

Tools Required:

10mm Spanner

