




RHINO-RACK


QMFK01

Item	Component Name	Qty	Part No.
1	M6 Nut with Foam	8	N018
2	Instructions	1	R577




1

Move to the tub of the vehicle. Remove the rubber plugs closest to the cabin in the tracks on either side of the tub.

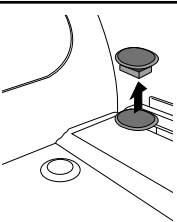


2

With the plugs removed, slide four M6 nuts in both sides, foam side down.

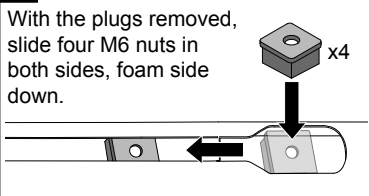

3

QMDHD05 Fit Kit.

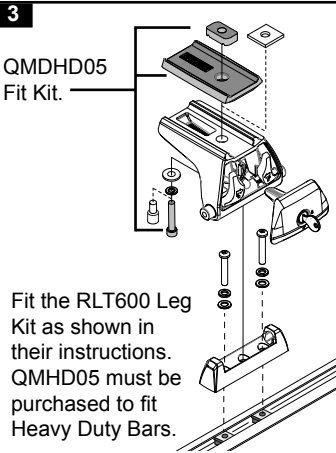

Fit the RLT600 Leg Kit as shown in their instructions. QMDHD05 must be purchased to fit Heavy Duty Bars.

Issue: 01

Document No: R577


Prepared: Kayle Everett



RHINO-RACK


QMFK01

Item	Component Name	Qty	Part No.
1	M6 Nut with Foam	8	N018
2	Instructions	1	R577

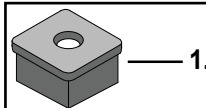


1

Move to the tub of the vehicle. Remove the rubber plugs closest to the cabin in the tracks on either side of the tub.

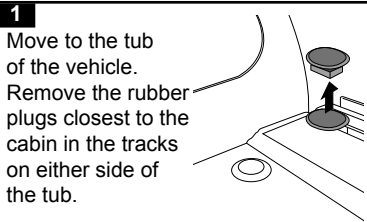


2

With the plugs removed, slide four M6 nuts in both sides, foam side down.

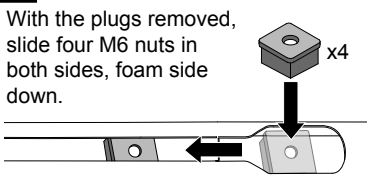

3

QMDHD05 Fit Kit.

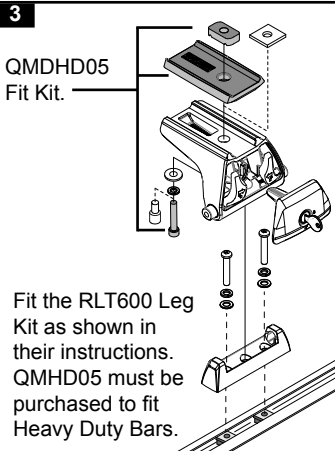

Fit the RLT600 Leg Kit as shown in their instructions. QMDHD05 must be purchased to fit Heavy Duty Bars.

Issue: 01

Document No: R577


Prepared: Kayle Everett



RHINO-RACK


QMFK01

Item	Component Name	Qty	Part No.
1	M6 Nut with Foam	8	N018
2	Instructions	1	R577

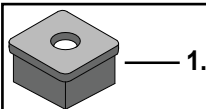


1

Move to the tub of the vehicle. Remove the rubber plugs closest to the cabin in the tracks on either side of the tub.

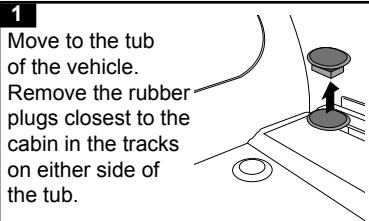


2

With the plugs removed, slide four M6 nuts in both sides, foam side down.

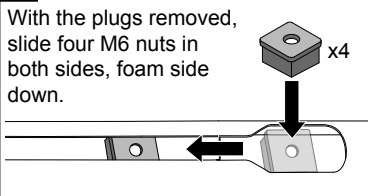

3

QMDHD05 Fit Kit.

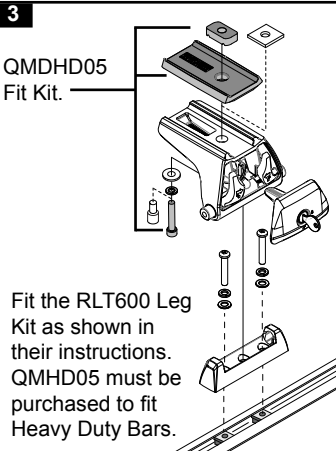

Fit the RLT600 Leg Kit as shown in their instructions. QMDHD05 must be purchased to fit Heavy Duty Bars.

Issue: 01

Document No: R577


Prepared: Kayle Everett



RHINO-RACK


QMFK01

Item	Component Name	Qty	Part No.
1	M6 Nut with Foam	8	N018
2	Instructions	1	R577

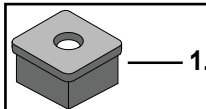


1

Move to the tub of the vehicle. Remove the rubber plugs closest to the cabin in the tracks on either side of the tub.

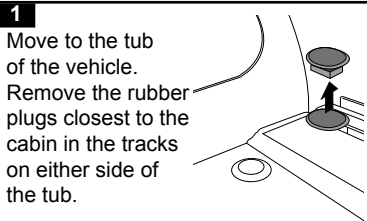


2

With the plugs removed, slide four M6 nuts in both sides, foam side down.

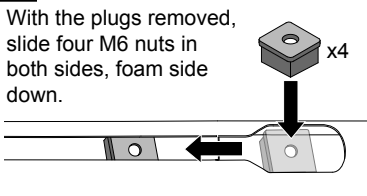

3

QMDHD05 Fit Kit.

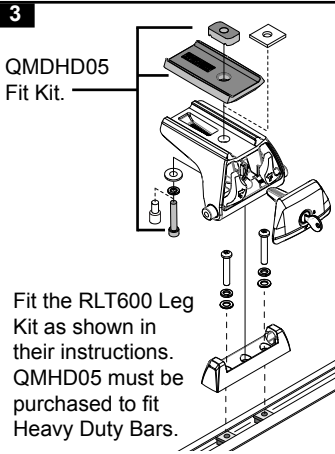

Fit the RLT600 Leg Kit as shown in their instructions. QMDHD05 must be purchased to fit Heavy Duty Bars.

Issue: 01

Document No: R577


Prepared: Kayle Everett



RHINO-RACK


QMFK01

Item	Component Name	Qty	Part No.
1	M6 Nut with Foam	8	N018
2	Instructions	1	R577

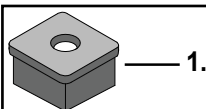


1

Move to the tub of the vehicle. Remove the rubber plugs closest to the cabin in the tracks on either side of the tub.

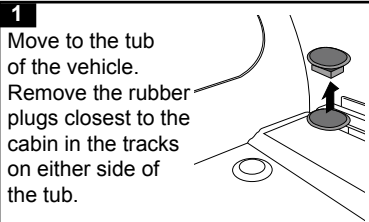


2

With the plugs removed, slide four M6 nuts in both sides, foam side down.

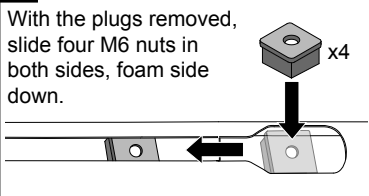

3

QMDHD05 Fit Kit.

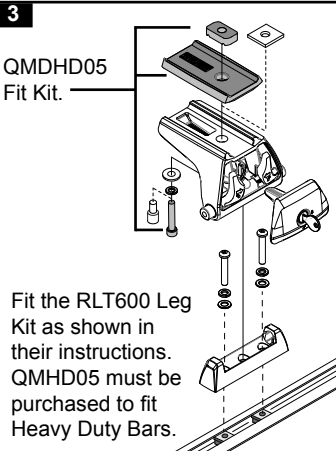

Fit the RLT600 Leg Kit as shown in their instructions. QMDHD05 must be purchased to fit Heavy Duty Bars.

Issue: 01

Document No: R577


Prepared: Kayle Everett



RHINO-RACK


QMFK01

Item	Component Name	Qty	Part No.
1	M6 Nut with Foam	8	N018
2	Instructions	1	R577

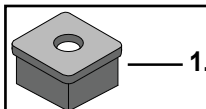


1

Move to the tub of the vehicle. Remove the rubber plugs closest to the cabin in the tracks on either side of the tub.

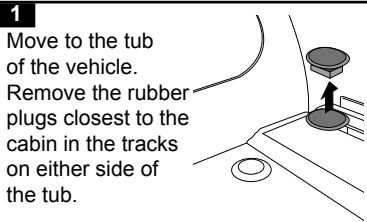


2

With the plugs removed, slide four M6 nuts in both sides, foam side down.

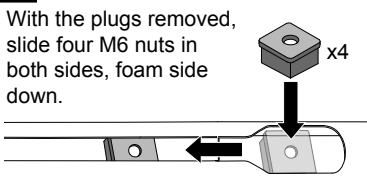

3

QMDHD05 Fit Kit.

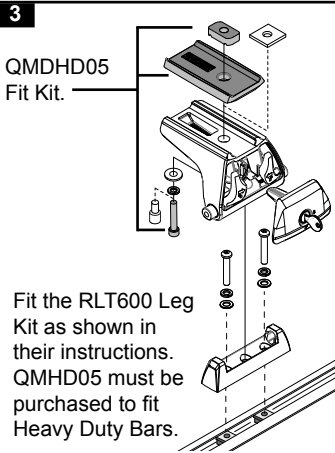

Fit the RLT600 Leg Kit as shown in their instructions. QMDHD05 must be purchased to fit Heavy Duty Bars.

Issue: 01

Document No: R577

Prepared: Kayle Everett