





Thule Rapid System Kit 1370

> Instructions

VOLVO V70, 5-dr Estate, 04-07

VOLVO V70, 5-dr Wagon, *05-10

*North America

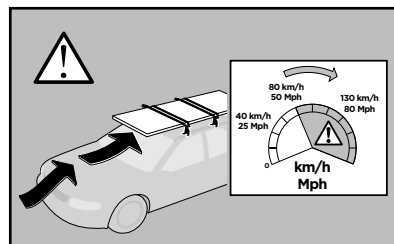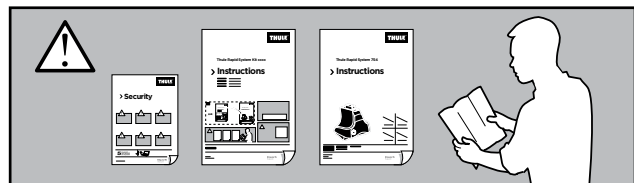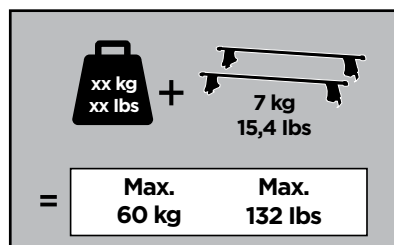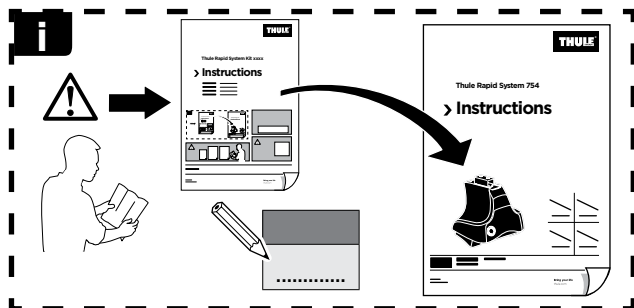


ISO 11154-E

141370
C.20121010
519-1370-02

Bring your life
thule.com



188 x4




696 x2



698 x2





x1



x1

1

	X (scale)	X (mm)	X (inch)
VOLVO V70 , 5-dr Estate, 04-07	38	1031	40 ⁵ / ₈
VOLVO V70 , 5-dr Wagon, *05-10	38	1031	40 ⁵ / ₈

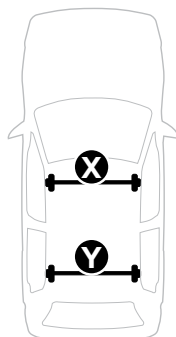
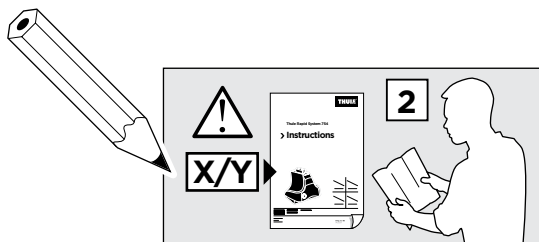


	Y (scale)	Y (mm)	Y (inch)
VOLVO V70 , 5-dr Estate, 04-07	35,5	1006	39 ⁵ / ₈
VOLVO V70 , 5-dr Wagon, *05-10	35,5	1006	39 ⁵ / ₈



2

VOLVO V70, 5-dr Estate, 04-07

VOLVO V70, 5-dr Wagon, *05-10

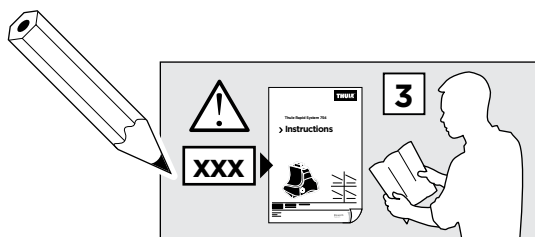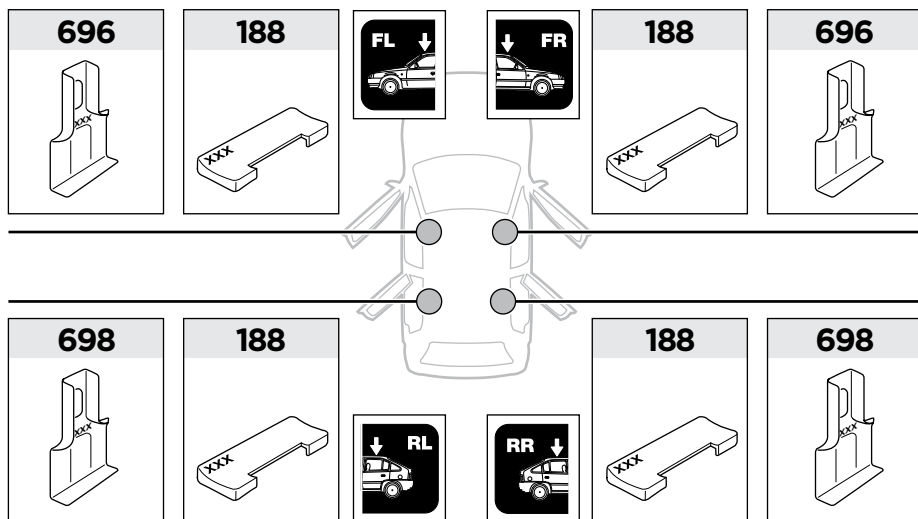

3

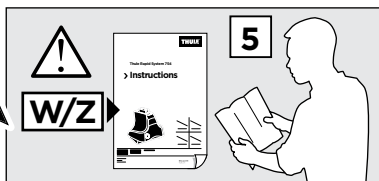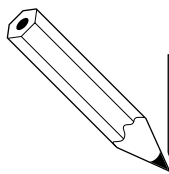

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLVO V70, 5-dr Estate, 04-07	355	810	14	31 ⁷/₈
VOLVO V70, 5-dr Wagon, *05-10	355	810	14	31 ⁷/₈

