


**THULE**
SWEDEN

Thule Rapid System Kit 1856

> Instructions

FIAT 500, 3-dr Hatchback, 07-/ *11-

*North America

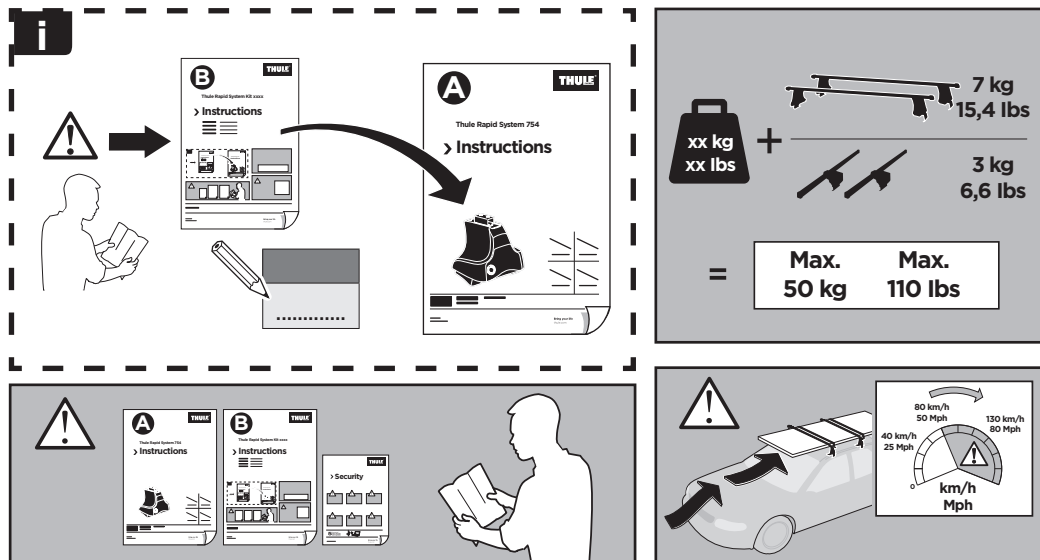

ISO 11154-E

141856

C.20170516
519-1856-02

Bring your life
thule.com




932 x2




1099 x2

474

x4





x1



x1

1


	X (scale)	X (mm)	X (inch)
FIAT 500, 3-dr Hatchback, 07-/ *11-	33,5	986	38 ⁷ / ₈

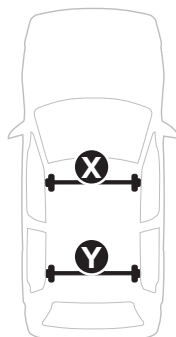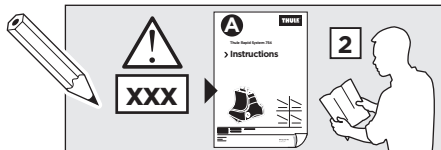



	Y (scale)	Y (mm)	Y (inch)
FIAT 500, 3-dr Hatchback, 07-/ *11-	28	931	36 ⁵ / ₈

2


SRA

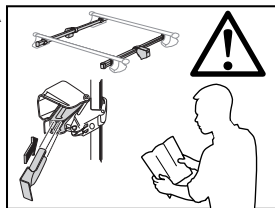

FIAT 500, 3-dr Hatchback, 07-/ *11-

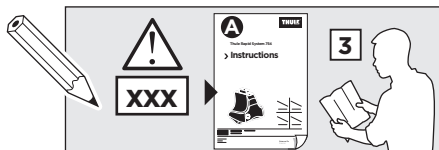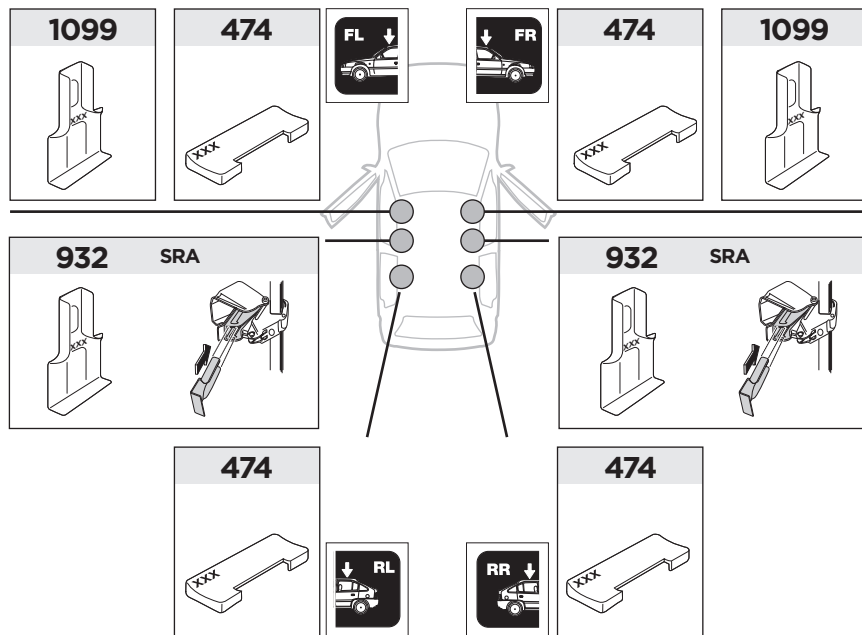

3

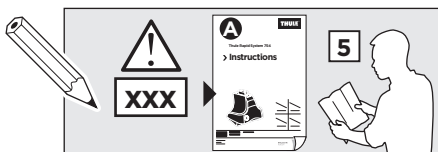

	W (mm)	Z (mm)	Y (mm)	W (inch)	Z (inch)	Y (inch)
FIAT 500, 3-dr Hatchback, 07-/ *11-	250	600	270	9 7/8	23 5/8	10 5/8

